



S. P. Wales Ltd

Electrical Metering Specialists



Iskra ME172 Instructions – (SPWIS172 – Reading)

The auto scroll display, (viewable without having to press any buttons), displays the following:

1.8.0 A+ All Phases Energy, Total (kWh)

To access the manual scroll display, press the blue button twice until you come to 'Std dAtA', then hold the blue button down for 5 seconds to enter. Once in 'Std dAtA' press the blue button to manually scroll through the other parameters available:

0.9.1 Time of Day
0.9.2 Date
0.0.0 Device Address 1
C.1.6 Firmware check sum
0.2.0 Firmware version
11.7.0 Instantaneous Current (I)
12.7.0 Voltage (V)
13.7.0 Instantaneous Power Factor
14.7.0 Frequency
1.7.0 A+ All Phases Instantaneous Power (kW)
1.8.0 A+ All Phases Energy, Total (kWh)
F.F.0 Fatal Error Status Register
255.255.0 LCD Test
255.255.1 End of Sequence



When you have reached end of sequence, let the display time out and the meter will return to auto scroll mode.

Web: www.spwales.com | Email: sales@spwales.com | Phone: 01803 295430 | Fax: 01803 212819

While Stephen P Wales Ltd has made every reasonable effort to ensure the accuracy of this information, Stephen P Wales Ltd does not guarantee that it is error-free, nor does Stephen P Wales Ltd make any other representation, warranty or guarantee that the information is accurate, correct, reliable or current. Stephen P Wales Ltd reserves the right to make any adjustments to the information contained herein at any time without notice.