



Iskra ME172 Instructions – (SPWIS172B – Billing)

The auto scroll display, (viewable without having to press any buttons), displays the following:

1.8.0 A+ All phases energy, total kwh

To access the manual scroll display, press the blue button twice until you come to 'Std dAtA', then hold the blue button down for 5 seconds to enter. Once in 'Std dAtA' press the blue button to manually scroll through the other parameters available:

0.9.1	Time of Day
0.9.2	Date
0.0.0	Device Address 1
C.1.6	Firmware check sum
0.2.0	Firmware version
11.7.0	Instantaneous Current (I)
12.7.0	Voltage (V)
13.7.0	Instantaneous Power Factor
14.7.0	Frequency
1.7.0	A+ All Phases Instantaneous Power (kW)
1.8.0	A+ All Phases Energy, Total (kWh)
1.8.0.1	A+ All Phases Energy, Total – Reading for Current Month
1.8.0.2	A+ All Phases Energy, Total – Reading for Last Month
1.8.0.3	A+ All Phases Energy, Total – Reading for 2 months ago
1.8.0.4	A+ All Phases Energy, Total – Reading for 3 months ago
1.8.0.5	A+ All Phases Energy, Total – Reading for 4 months ago
1.8.0.6	A+ All Phases Energy, Total – Reading for 5 months ago
1.8.0.7	A+ All Phases Energy, Total – Reading for 6 months ago
1.8.0.8	A+ All Phases Energy, Total – Reading for 7 months ago
1.8.0.9	A+ All Phases Energy, Total – Reading for 8 months ago
F.F.0	Fatal Error Status Register
255.255.0	LCD Test
255.255.1	End of Sequence



When you have reached end of sequence, let the display time out and the meter will return to auto scroll mode.

Web: www.spwales.com | Email: sales@spwales.com | Phone: 01803 295430 | Fax: 01803 212819