


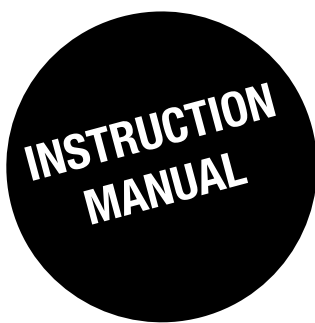

COUNTIS **E27/E28**

Three-phase energy meter
Direct - 80 A Ethernet

EN



COUNTIS E27



COUNTIS E28 - MID



www.socomec.com/en/countis-e2x

1. DOCUMENTATION	3
2. HAZARDS AND WARNINGS	4
2.1. Risk of electrocution, burns or explosion	4
2.2. Risk of damaging the unit	4
2.3. Responsibility	4
3. PRELIMINARY OPERATIONS	5
4. INTRODUCTION	6
4.1. Introducing the COUNTIS E27/E28	6
4.2. Functions	6
4.3. Front panels	6
4.4. LCD display	7
4.5. Dimensions	7
4.6. Electrical values measured	8
4.6.1. Measurements	8
4.6.2. Energy balance; definition	8
5. INSTALLATION	9
5.1. Recommendations and safety	9
5.2. DIN rail mounted	9
6. CONNECTION	10
6.1. Connecting the COUNTIS E27/E28	10
6.2. Connection to the electrical network and to the loads	10
7. MID COMPLIANCE	11
8. COMMUNICATION	12
8.1. General information	12
8.2. Communication structure	12
8.3. Communication tables	12
9. CONFIGURATION	13
9.1. Onscreen configuration	13
9.1.1. View all of the menu "SETUP 2"	14
9.1.2. Detailed view of menu "SETUP 2"	15
9.1.3. Example: setting the communication address	16
10. USE	17
10.1. Detailed view of the menu for tariff 1, "Tar.1"	18
10.2. Detailed view of the menu for tariff 2, "Tar.2"	19
10.3. Detailed view of the total menu, "tot"	20
10.4. Detailed view of the menu showing partial readings and the energy balance "Par.b"	21
10.4.1. Starting up the partial energy meter	22
10.4.2. Stopping the partial energy meter	22
10.4.3. Resetting the partial energy meter to zero	22
10.5. Detailed view of the menu for realtime readings, "rt"	23
10.6. Detailed view of the menu "info"	24
11. DIAGNOSTICS MESSAGES	25
12. ASSISTANCE	25
13. CHARACTERISTICS	26
14. LIST OF ABBREVIATIONS	28

1. DOCUMENTATION

All documentation on the COUNTIS E27/E28 is available on the website at the following address:
www.socomec.com/en/countis-e2x



2. HAZARDS AND WARNINGS

The term "device" used in the paragraphs below refers to the COUNTIS E27/E28.

The assembly, use, servicing and maintenance of this equipment must only be carried out by trained, qualified professionals.

SOCOMEK shall not be held responsible for failure to comply with the instructions in this manual.

2.1. Risk of electrocution, burns or explosion

- This device must only be installed and serviced by qualified personnel who have in-depth knowledge of installing, commissioning and operating the device and who have had appropriate training. He or she should have read and understood the various safety measures and warnings stated in the instructions.
- Before carrying out any work on the unit, switch off the voltage inputs.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Replace all devices, doors and covers before turning on power to this equipment.
- Always power the device with the correct rated voltage.
- Install the unit following the recommended installation instructions and in a suitable electrical cabinet.

Failure to take these precautions could cause death or serious injuries.

2.2. Risk of damaging the unit

To ensure that the unit operates correctly, make sure that:

- The unit is correctly installed.
- There is a maximum voltage at the voltage input terminals of 288 VAC phase-neutral
- The network frequency indicated on the device is observed: 50 or 60 Hz.
- There is a maximum current of 80 A at the current input terminals (I1, I2 and I3).

Failure to respect these precautions could cause damage to the unit.

2.3. Responsibility

- Assembly, connection and use must be carried out in accordance with the installation standards currently in force.
- The unit must be installed in accordance with the rules given in this manual.
- Failure to observe the rules for installing this unit may compromise the device's intrinsic protection.
- The unit must be positioned within an installation which complies with the standards currently in force.
- Any cable which needs to be replaced may only be replaced with a cable having the correct rating.

3. PRELIMINARY OPERATIONS

To ensure the safety of staff and the equipment, it is vital to read and absorb the contents of these instructions thoroughly before commissioning.

Check the following points as soon as you receive the package containing the unit:

- The packaging is in good condition
- The unit has not been damaged during transportation
- The device reference number conforms to your order
- The package includes:
 - 1 device
 - 1 ferrite core
 - 1 sealing kit (for COUNTIS E28)
 - 1 Quick Start guide

4. INTRODUCTION

4.1. Introducing the COUNTIS E27/E28


The COUNTIS E27 and E28 are modular active and reactive electrical energy meters that display consumed energy. They are designed for three-phase networks and allow a direct connection of up to 80 A. They are equipped with an Ethernet communication Bus.

4.2. Functions

- Measures and displays total and partial energy
- Dual tariff management: T1 / T2
- Electrical parameter measurements: I, U, V, f
- Power, power factor
- TCP Modbus communication
- MID version (according to reference)


Description	Reference
COUNTIS E27	4850 3054
COUNTIS E28 - Version MID	4850 3055

4.3. Front panels

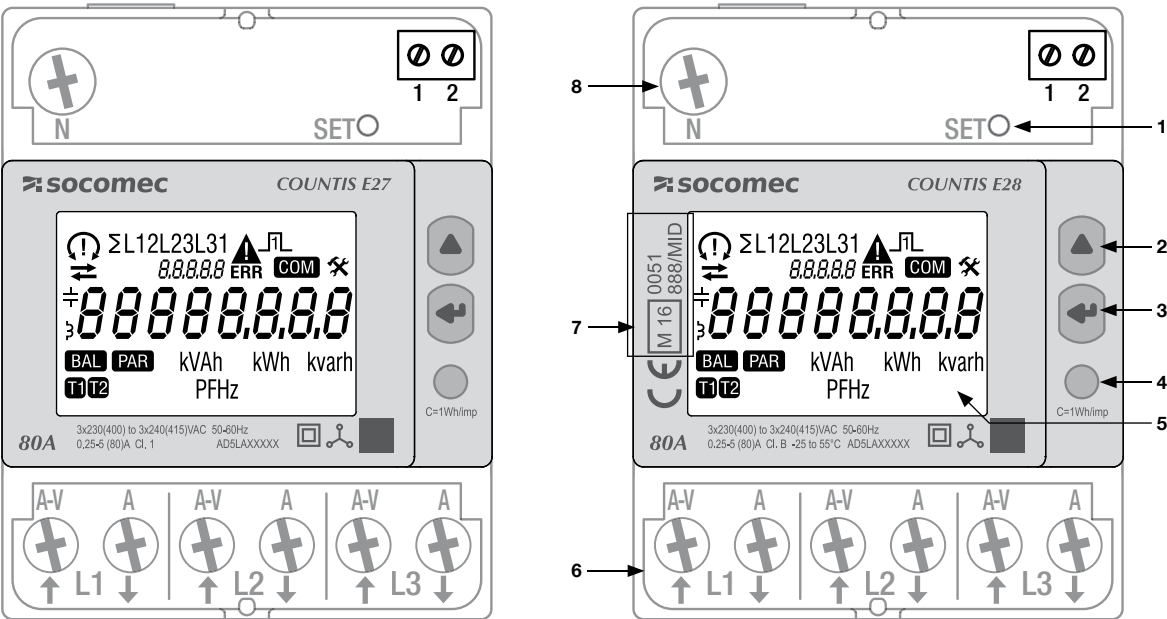

1. SET button
2. UP button
3. ENTER key
4. Metrological LED
5. LCD display
6. Three-phase network connection
7. Information relating to MID certification
8. Neutral connection


4.4. LCD display

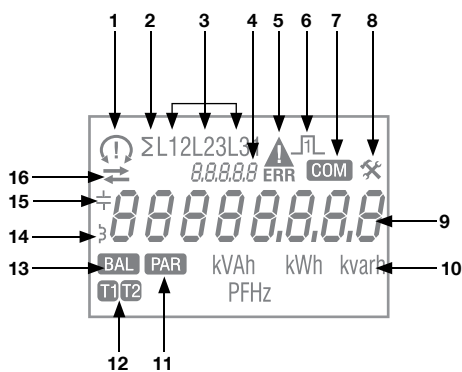

1. Phase sequences:
 132
 123
 one or multiple phases are not detected
2. System value
3. Value by phase
4. Identification of current menu
5. Device malfunction. Replace the device
6. Active pulse output
7. Active communication
8. Setup menu
9. Main zone
10. Measurement Unit
11. Partials meters. Flashing = partial meter has stopped
12. Tariff display
13. Energy balance
14. Inductive value
15. Capacitive value
16. Imported (→) or exported energy or power (←)

4.5. Dimensions

Dimensions: in/mm

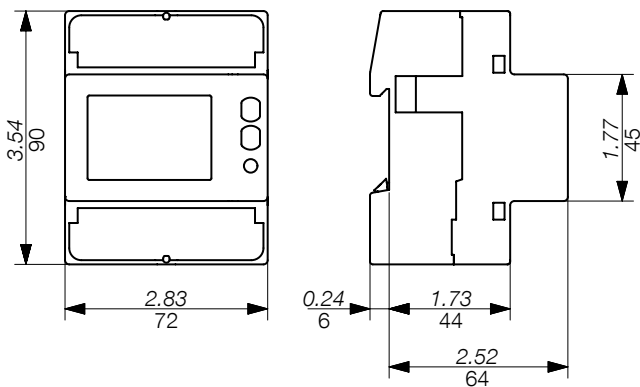

4.6. Electrical values measured

4.6.1. Measurements

Settings vary by model.

Realtime values	Symbol	Measurement Unit	LCD display	Via communication
Neutral voltage	$\sum V$	V	●	●
	V1, V2, V3			●
Phase to phase voltage	$\sum U$		●	●
	U12, U23, U31			●
Current	$\sum I$	A	●	●
	I1, I2, I3, IN			●
Power factor	$\sum PF$		●	●
	PF1, PF2, PF3			●
Apparent power	$\sum S$, S1, S2, S3	kVA	●	●
Active power	$\sum P$, P1, P2, P3	kW	●	●
Reactive power	$\sum Q$, Q1, Q2, Q3	kVAr	●	●
Frequency	f	Hz	●	●
Phase sequence	CW / CCW		●	●
Direction of current	↺		●	
Logged data				
Total active and reactive energy	Ea, Er ($\sum$ & by phase)	kWh, kvarh	●	●
Total apparent energy	Eap ($\sum$)	kVAh	●	●
	Eap (per phase)			●
Total reactive, inductive and capacitive energy	Er ($\sum$)	kvarh	●	●
	Er (per phase)			●
Total active, reactive and apparent energy for each tariff (T1/T2)	Ea, Er ($\sum$)	kWh, kvarh	●	●
	Ea, Er, Eap ($\sum$ & per phase)	kWh, kvarh, kVAh		●
Total reactive, inductive and capacitive energy for each tariff (T1/T2)	Er ($\sum$)	kvarh	●	●
	Er (per phase)			●
Active, partial energy for each tariff (T1/T2)	Ea ($\sum$)	kWh	●	●
Active, reactive and apparent partial energy	Ea, Er, Eap ($\sum$)	kWh, kvarh, kVAh	●	●
Energy balance	$\sum$	kWh, kvarh	●	●
Miscellaneous				
Current tariff	T	1/2		●
Partial meters	BY	START/STOP	●	
State of the pulse output	$\square$	Active / inactive	●	

NOTE: $\sum$ is the sum of the meter readings for each phase, divided by 3.

4.6.2. Energy balance; definition

	Formula
kWh	(+kWh T1) – (-kWh T1) + (+kWh T2) – (-kWh T2)
kvarh	(+kvarh T1) – (-kvarh T1) + (+kvarh T2) – (-kvarh T2)

5. INSTALLATION

The paragraphs below describe how to install the device.

5.1. Recommendations and safety

Refer to the safety instructions (section "2. Hazards and warnings", page 4)


- Keep away from electromagnetic interference generator systems,
- Avoid vibrations with accelerations greater than 1 g for frequencies lower than 60 Hz.

5.2. DIN rail mounted

The COUNTIS E27/E28 can be mounted on a 35-mm DIN rail (EN 60715TM35). They must be used inside electrical cabinets.


6. CONNECTION

6.1. Connecting the COUNTIS E27/E28

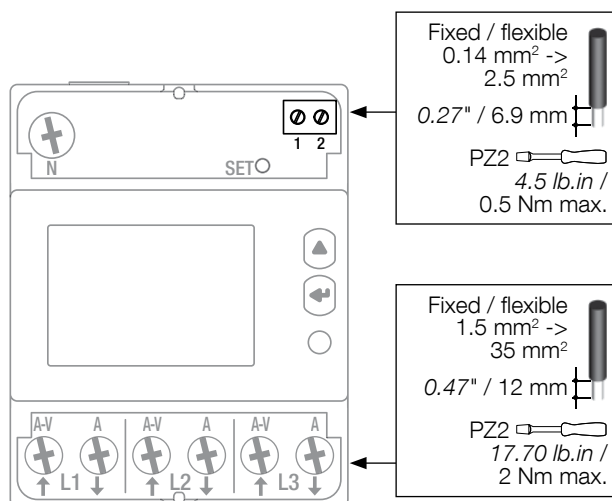

6.2. Connection to the electrical network and to the loads

The COUNTIS E27 and E28 are intended for three-phase networks with neutral.

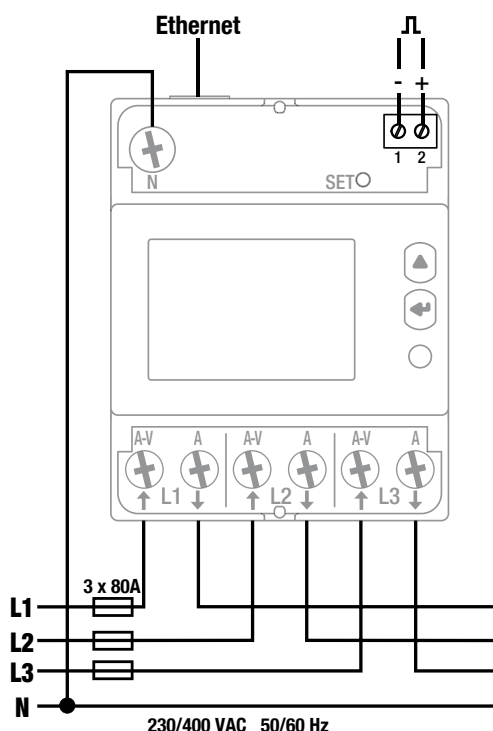

Ethernet

RJ45. The Ethernet cable must pass twice through the ferrite core, positioned at least 5 cm away from the device.

Pulse output

1: -
2: +

Optocoupler pulse outputs

Terminals 1-2 must be supplied with voltage between 5 and 27 VDC (27mA max)


Mains

L1 A-V: Phase input
L1 A: Phase output
L2 A-V: Phase input
L2 A: Phase output
L3 A-V: Phase input
L3 A: Phase output
N: Neutral connection

7. MID COMPLIANCE

The following points must be taken into consideration to ensure that the device is used in compliance with directive MID 2014/32/EU:

- **Type of network**
COUNTIS E28 meters comply with the MID directive for connection to networks: 3P+N (see "6.2. Connection to the electrical network and to the loads", page 10)
- **Fitting terminal covers**
After connecting the device, ensure that the terminal covers are fitted properly and secured by the plastic seals provided with the device.
- **Locking the program button**
Make sure the SET program button is locked after fitting the terminal cover.
- **Communication**
The information provided via the TCP Modbus COM is transmitted for information only and has no legal value.
- **MID Declaration of Conformity**
The MID Declaration of Conformity is available on the website: www.socomec.com/en/countis-e2x

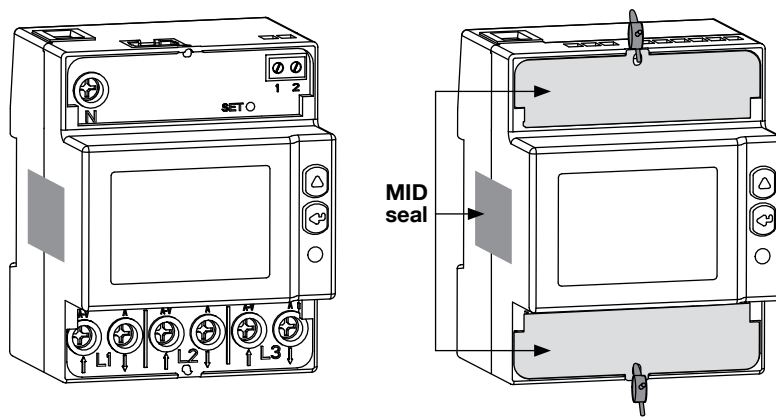

8. COMMUNICATION

8.1. General information

The Modbus communication available on the COUNTIS E27/E28 communicates via an Ethernet link which is used to operate devices from a PC or an API.

8.2. Communication structure

The device communicates via a Modbus protocol which involves a dialogue in accordance with a master/slave structure. Communication is via TCP (Transmission Control Protocol) through the Ethernet communication port.

The default IP address is:

IP address: 192.168.0.4

Subnet Mask: 255.255.255.000

Gateway: 192.168.0.1

Modbus address: 5


A web server lets you access the measurement data:

The broadcast communication is available for the log that stores the tariff.

8.3. Communication tables

The communication tables and relevant notes are available on the COUNTIS E27/E28 documentation page on the website at the following address:

www.socomec.com/en/countis-e2x

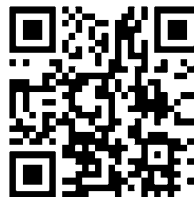

9. CONFIGURATION

The device can be configured directly from the COUNTIS E27/E28 screen in programming mode or via the communication link. The paragraphs below describe configuring using the screen.

9.1. Onscreen configuration

From the screen, go to programming mode to change your communication settings. How to browse through the programming mode is described in the following stages:

Function	Where	Buttons	Press
Switch menus	Every page with the exception of SETUP 1/2		Realtime
Switch pages within a menu	Every page within a menu		Realtime
Go to menu SETUP 2	Menu page SETUP		> 3 sec
Go to menu SETUP 1	Every page with the exception of SETUP 1	SET	> 3 sec
Change a value/digit	Pages SETUP 1/2		Realtime
Confirm a value/digit	Pages SETUP 1/2		Realtime
Exit menu SETUP 1/2	Menu SETUP 1/2		> 3 sec
Start/stop the displayed partial meter	Partial meter menu	 + 	Realtime
Reset the displayed partial meter to zero	Partial meter menu	 + 	> 3 sec
Display test	Every page with the exception of SETUP 1/2	 + 	> 10 sec

9.1.1. View all of the menu "SETUP 2"

In the SETUP 2 menu, press " " for 3 seconds to put the device into programming mode.

You can go to the different screens by pressing " ":

SETUP,2	  >3s
IP address 1	
IP address 2	
IP address 3	
IP address 4	
Netmask 1	
Netmask 2	
Netmask 3	
Netmask 4	
Gateway 1	
Gateway 2	
Gateway 3	
Gateway 4	
Reset partial energy to zero: Ea+ partial (kWh) Tariff T1, T2 Ea+ partial (kWh) Ea- partial (kWh) Tariff T1, T2 Ea- partial (kWh) Eap partial (kVAh) Er+ partial (kVarh) Er- partial (kVarh)	

Return to the first menu screen, "SETUP 2"

9.1.2. Detailed view of menu "SETUP 2"

SETUP.2

<>3s

Configuring with default settings

SETUP

Eth Sdef

Configuring devices with default settings

▲x1

IP address 1

SETUP

IP1 192

000, 001, ... **192**, ..., 254, 255

IP address 2

SETUP

IP2 168

000, 001, ... **168**, ..., 254, 255

IP address 3

SETUP

IP3 000

000, 001, ..., 254, 255

IP address 4

SETUP

IP4 004

000, 001, ... **004**, ..., 254, 255

Netmask 1

SETUP

net1 255

000, 001, ..., 254, **255**

Netmask 2

SETUP

net2 255

000, 001, ..., 254, **255**

Netmask 3

SETUP

net3 255

000, 001, ..., 254, **255**

Netmask 4

SETUP

net4 000

000, 001, ..., 254, 255

Gateway 1

SETUP

GAT1 192

000, 001, ... **192**, ..., 254, 255

Gateway 2

SETUP

GAT2 168

000, 001, ... **168**, ..., 254, 255

Gateway 3

SETUP

GAT3 000

000, 001, ..., 254, 255

Gateway 4

SETUP

GAT4 001

000, **001**, ..., 254, 255

Reset energies

SETUP

RES ALL

PAR


Ea+ partial Tariff T1, T2;
 Ea+ partial; Ea- partial Tariff
 T1, T2; Ea- partial; Eap partial;
 Er+ partial; Er- partial

Go back to the first menu screen, "SETUP 2"

9.1.3. Example: setting the communication address

In "SETUP 2" mode (see page 13), go to the "IP address 1" screen

Example: changing the communication address to IP 007.

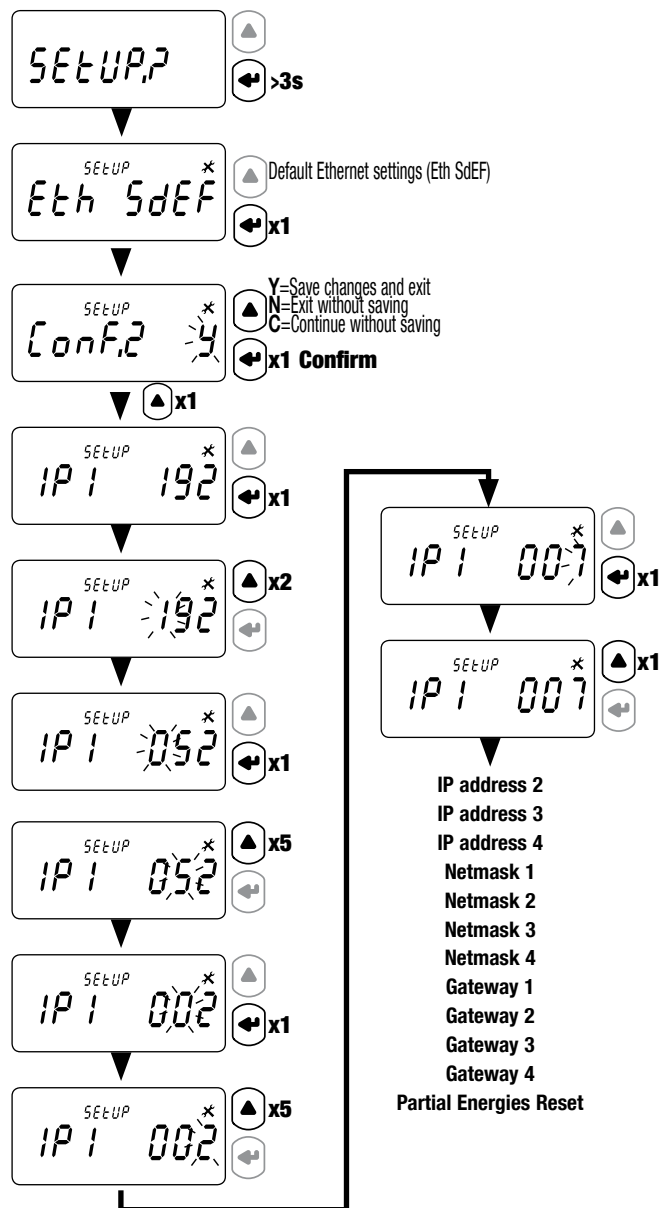

XX = default value

10. USE

Switch menus by pressing "". Press "" to see the electrical readings or information within a menu.

The menus and related measurements are described in the table below:

Tariff 1 (Tar.1)	Tariff 2 (Tar.2)	Total (tot)	Partial readings and energy balance (Par.b)	Realtime values (rt)	Information (inFo)
Tariff 1 - Imported and exported active energy	Tariff 2 - Imported and exported active energy	Total imported and exported active energy	Partial imported active energy by tariff	Active, apparent and reactive power	Metrological firmware version
Tariff 1 - Imported and exported inductive reactive energy	Tariff 2 - Imported and exported inductive reactive energy	Total apparent energy	Partial imported active energy	Phase/phase and phase/neutral voltage	Non-metrological firmware version
Tariff 1 - Imported and exported capacitive reactive energy	Tariff 2 - Imported and exported capacitive reactive energy	Total imported and exported inductive reactive energy	Partial exported active energy by tariff	Three-phase current	Checksum of metrological firmware
Tariff 1 - Imported and exported reactive energy	Tariff 2 - Imported and exported reactive energy	Total imported and exported capacitive reactive energy	Partial exported active energy	Power factor	Checksum of non-metrological firmware
Go back to first screen, menu "Tar.1"	Go back to first screen, menu "Tar.2"	Total imported and exported reactive energy	Partial apparent energy	Frequency	Installed communication port
		Go back to first screen, menu "tot"	Partial imported and exported reactive energy	Go back to first screen, menu "rt"	Go back to first screen, menu "info"
			Active energy balance		
			Reactive energy balance		
			Go back to first screen, menu "Par.b"		

10.1. Detailed view of the menu for tariff 1, "Tar.1"

Imported active energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kWh

Exported active energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kWh

Imported inductive reactive energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kvarh

Exported inductive reactive energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kvarh

Imported capacitive reactive energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kvarh

Exported capacitive reactive energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kvarh

Imported reactive energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kvarh

Exported reactive energy, tariff 1

Ω^{Σ}
 $t_{Rr,l}$
000006.22
kvarh

Go back to first screen, menu "Tar.1"

10.2. Detailed view of the menu for tariff 2, "Tar.2"

Imported active energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kWh	

Exported active energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kWh	

Imported inductive reactive energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kvarh	

Exported inductive reactive energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kvarh	

Imported capacitive reactive energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kvarh	

Exported capacitive reactive energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kvarh	

Imported reactive energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kvarh	

Exported reactive energy, tariff 2	
$\sum$ $t_{Rr,2}$ 000006.22 kvarh	

Go back to first screen, menu "Tar.2"

10.3. Detailed view of the total menu, "tot"

Total imported active energy	
↺ L1 tot 0000008.32 kWh	L1, L2, L3, Σ

Total exported active energy	
↺ L1 tot 0000008.32 kWh	L1, L2, L3, Σ

Total apparent energy	
$\int \Sigma$ t_{tot} 0000008.32 kVAh	Σ


Total imported inductive reactive energy	

The screenshot shows a digital meter display with the text "Total exported inductive reactive energy" at the top. Below the text, there is a large digital readout showing "0000008.32" with "kvarh" (kilovolt-ampere reactive hours) as the unit. Above the digits, there is a small symbol consisting of a circle with a summation symbol (Σ) and a curved arrow pointing upwards. To the right of the digits, there is a small summation symbol (Σ).

Total imported capacitive reactive energy	
$\sum$ $\pm$ 0000008.32 kvarh	$\sum$

Total exported capacitive reactive energy	
$\sum$ $\div$ 0000008.32 kvarh	$\sum$

Total imported reactive energy	
 ^{L1} ^{tot} 0000008.32 kvarh	L1, L2, L3, Σ

 Total exported reactive energy	
	L1, L2, L3, Σ

Go back to first screen, menu "tot"

10.4. Detailed view of the menu showing partial readings and the energy balance "Par.b"


Imported partial active energy for tariff T1	
	Σ
Imported partial active energy for tariff T2	
	Σ
Partial imported active energy	
	Σ
Exported partial active energy for tariff T1	
	Σ
Exported partial active energy for tariff T2	
	Σ
Partial exported active energy	
	Σ
Partial apparent energy	
	Σ

Partial imported reactive energy	
	Σ
Partial exported reactive energy	
	Σ
Active energy balance	
Reactive energy balance	


Go back to first screen, menu "Par.b"

Go back to first screen, menu "Par.b"


10.4.1. Starting up the partial energy meter

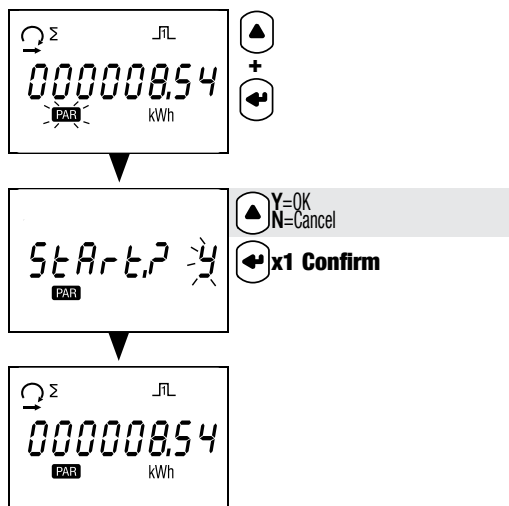

10.4.2. Stopping the partial energy meter

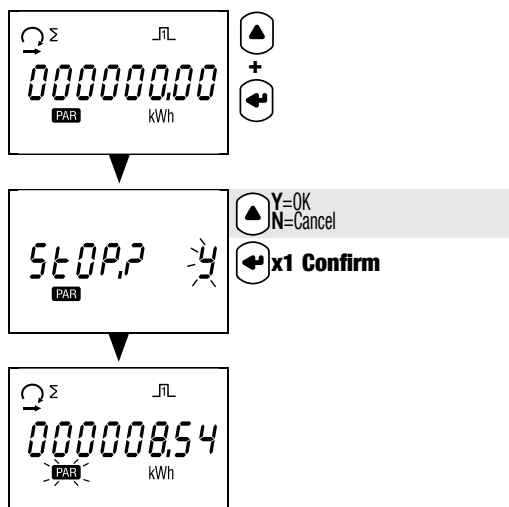

10.4.3. Resetting the partial energy meter to zero

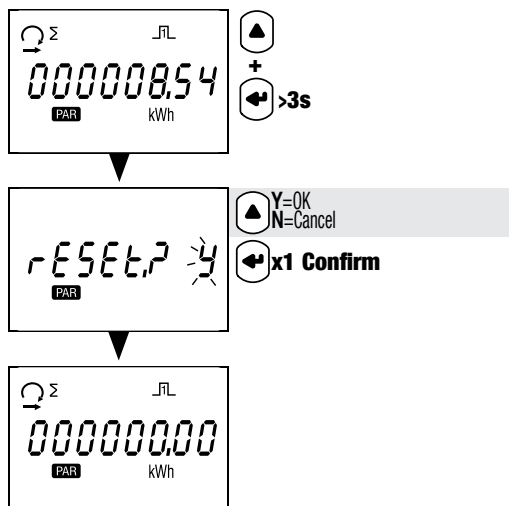

10.5. Detailed view of the menu for realtime readings, "rt"

Realtime active power	
$\odot^{L1}_{rt}$ 11.50 kW	L1, L2, L3, Σ

Realtime apparent power	
$\odot^{L1}_{rt}$ 11.50 kVA	L1, L2, L3, Σ

Realtime reactive power	
$\odot^{L1}_{rt}$ 11.50 kvar	L1, L2, L3, Σ

Realtime phase/phase voltage	
$\odot^{\Sigma L12\ 23\ 31}_{rt}$ 151.3 V	Σ

Realtime phase/neutral voltage	
$\odot^{\Sigma L1\ 2\ 3}_{rt}$ 075.7 V	Σ

Realtime three-phase current	
$\odot^{\Sigma}_{rt}$ 69.67 A	Σ

Realtime power factor	
$\odot^{\Sigma}_{rt}$ 0.8000 PF	Σ

Frequency	
$\odot^{\Sigma}_{rt}$ 50.00 Hz	

Go back to first screen, menu "rt"

10.6. Detailed view of the menu "info"

Metrological firmware version	
info rEL1 1.22	

Non-metrological firmware version	
info rEL2 3.02	

Checksum of metrological firmware	
info [51 7A37	

Checksum of non-metrological firmware	
info [52 6b87	

Installed communication port	
info Eth	



Go back to first screen, menu "info"

11. DIAGNOSTICS MESSAGES

The following messages appear if there are connection or malfunction errors.

11.1. Missing phases




- If one or several phases are not detected, the exclamation point  flashes on the screen. Example: phase not detected

11.2. Reversed phases



- If a 123 phase sequence is detected, the  symbol appears.
- If a 132 phase sequence is detected, the  symbol appears.

11.3. Malfunction

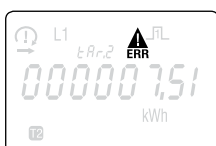

- If you see this message, the meter has malfunctioned and must be replaced.

12. ASSISTANCE

Causes	Solutions
Device not working	Check the neutral and phase 1 cable connections.
Phases not shown onscreen	Check the connections
Phases reversed onscreen	Check the network configuration
Error message	Check the meter is working OK

13. CHARACTERISTICS

GENERAL FEATURES	
Compliant with	European EMC Directive No. 2014/30/EU dated 26/02/2014 LV Directive No. 2014/35/EU dated 26/02/2014 Measuring Instrument Directive MID No. 2014/32/EU dated 26/02/2014 EN50470-1/-3 IEC 62053-21/-23
Frequency	50 and 60 Hz (± 1 Hz)
Power supply	Self-supplied
Rated dissipated power (Wmax.)	7.5VA (0.5W)
FEATURES	
Three-phase connectivity	4 wires 3x230/400V to 3x240/415V
Stores energy readings and settings	In FRAM memory
Identifies display of tariffs	T1 and T2
CURRENT MEASUREMENTS	
Type	Three-phase - direct 80 A
Input consumption	0.5VA max. per phase
Startup current (Ist)	20mA
Minimum current (Imin)	0.25A
Transition current (Itr)	0.5A
Reference current (Iref)	5A
Permanent overload (Imax)	80A
Intermittent overload	30 Imax for 1/2 cycle
OVERLOAD CAPACITY	
DC voltage Un	288 VAC
Realtime voltage Un (1 s)	300 VAC
DC current Imax	80 A
Realtime current Imax	30 Imax for 1/2 cycle
VOLTAGE MEASUREMENTS	
Range of measurement	230-240V $\pm 20\%$
Consumption	3.5VA max. per phase
Permanent overload	290V phase-neutral / 500V phase-phase
FREQUENCY MEASUREMENT	
Frequency measurement	45-65 Hz
ENERGY MEASUREMENT	
Active	Yes
Reactive	Yes
Total and partial reading	Yes
MID metering	Bidirectional with three-phase
Resolution	10 Wh, 10 varh
ENERGY ACCURACY	
Active energy Ea+	Class B (EN 50470-3) E28 Class 1 (IEC 62053-21)
Reactive energy Er+	Class 2 (CEI 62053-23)
TARIFF for Ea+	
Tariff management	Yes (via communication)

Number of tariffs managed	2
METROLOGICAL LED (Ea+, Ea-)	
Pulse value	1000 pulses / kWh
Colour	Red
PULSE OUTPUT	
Type	Opto-isolated - 5 ... 27VDC 27mA according to EN 62053-31
Pulse weight	100 Wh
DISPLAY	
Type	8-digit LCD with backlight
Refresh time	1 s
Backlight activation time	10 s
Active energy: 1 display, 8-digit	000000.01 - 999999.99 kWh
Reactive energy: 1 display, 8-digit	000000.01 - 999999.99 kvarh
Apparent energy: 1 display, 8-digit	000000.01 - 999999.99 kVAh
Realtime active power: 1 display, 4-digit	00.00 - 99.99 kW
Realtime reactive power: 1 display, 4-digit	00.00 - 99.99 kvar
Realtime reactive power: 1 display, 4-digit	00.00 ... 99.99 kVA
Realtime voltage: 1 display, 4-digit	000.0 ... 999.9 V
Realtime current: 1 display, 4-digit	00.00 ... 99.99 A
Power factor: 1 display, 4-digit	0.001-1.000
Frequency: 1 display, 4-digit	45.00-65.00 Hz
COMMUNICATION	
Ethernet	Full duplex
Protocol	Modbus TCP, HTTP, NTP, DHCP
Baudrate	10/100 Mbps
Web server password	Username: admin / password: Admin Username: user / password: user
Default IP address	192.168.0.4
Default Gateway IP address	192.168.0.1
Default netmask	255.255.255.000
Default slave address	5
SAVING	
Energy registers	In FRAM memory
ENVIRONMENTAL CONDITIONS	
Mechanical environment	M1
Electromagnetic environment	E2
Operating temperature range	-25°C to +55°C
Storage temperature	-25°C to 75°C
Humidity	≤ 80%
Installation	Internal (box/cabinet)
Vibrations	±0.075 mm
HOUSING	
Dimensions W x H x D (mm)	Modular - width of 4 modules (DIN 43880) 72 x 90 x 64
Mounting	On DIN rail (EN 60715)
Connection capacity, tightening torque	See chapter "6. Connection", page 10
Protection index	Front: IP51 - casing: IP20

Insulation class	Class II (EN 50470-1)
Weight	440 g

14. LIST OF ABBREVIATIONS

info	Menu information
rEL1	Metrological firmware version
rEL2	Non-metrological firmware version
CS1	Checksum of metrological firmware
CS2	Checksum of non-metrological firmware
tAr.1	Menu for Tariff 1
tAr.2	Menu for Tariff 2
tot	Total menu
PAr.b	Partial readings and energy balance menu
rt	Realtime values menu
SEtuP.2	Setup 2 menu
Addr	Slave address
bAud	Communication speed in bauds (bits per second)
Prty	Communication frame parity
n	No parity
o	Off parity
E	Even parity
StoP	Frame stop bit
1	1 stop bit
2	2 stop bits
rES	Reset partial energy
ConF?	Confirm selection
Y	Save and exit
N	Exit without saving
C	Continue without saving
tAr	Tariff management option
COM	Tariff management via communication
diG	Tariff management via device input

CORPORATE HQ CONTACT:
SOCOMEC SAS
1-4 RUE DE WESTHOUSE
67235 BENFELD, FRANCE

www.socomec.com



545 881 A - EN - 01/17

 **socomec**
Innovative Power Solutions