


Energy Management Energy Analyzer Type EM112

CARLO GAVAZZI

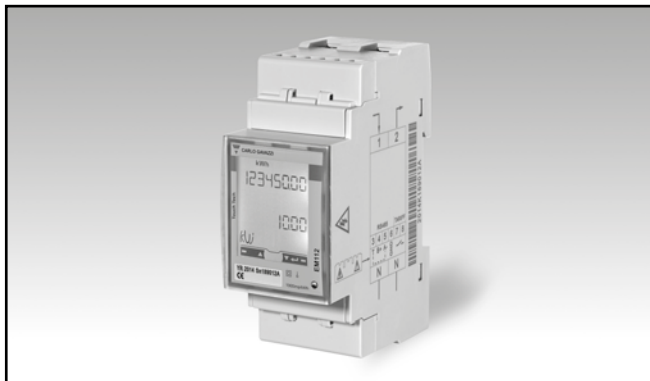

- Single phase energy analyzer
- Class 1 (kWh) according to EN62053-21
- Class B (kWh) according to EN50470-3
- Accuracy $\pm 0.5\%$ RDG (current/voltage)
- Direct current measurement up to 100AAC
- Backlit LCD display (3x 8-digit) with integrated touch key-pad
- Energy readout on display: 8 digit
- Variable readout on display: 4 digit
- Energy measurement: kWh and kvarh (imported/exported); kWh+ by 2 tariffs
- System variables, kW, kvar, V, A, PF, Hz, kWdmd, kWdmd peak
- Self power supply
- Dimensions: 2-DIN module
- Protection degree (front): IP51
- Pulse output (optional, by open collector PNP)
- RS485 Modbus port (optional)
- M-bus port (optional)
- Digital input (for tariff management)
- Easy connection or wrong current direction detection
- Certified according to MID Directive (option PF only): see "how to order" below


Product description

Single-phase energy analyzer with backlit LCD display with integrated touch keypad. Particularly indicated for active energy metering and for cost allocation in applications up to 100 A (direct connection), with dual tariff management availability. It can measure imported and exported energy or be programmed to consider only

the imported one. Housing for DIN-rail mounting, with IP51 front degree protection. The analyzer is optionally provided with pulse output proportional to the active energy being measured, RS485 Modbus port or M-bus port.

MID Certified according to MID Directive, Annex "B" + Annex "D" or Annex "B" + Annex "F" for legal metrology relevant to active electrical energy meters (see Annex MI-003 of MID). Can be used for fiscal (legal) metrology.

How to order EM112-DIN AV0 1 X 01 PF B

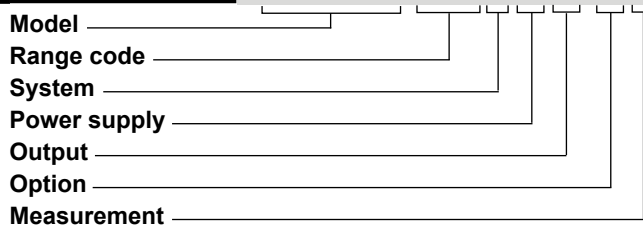

Type Selection

| Range code | System | Power supply | Output |
|--|--------------------------|---|--|
| AV0: 230VLN AC - 5(100)A (Direct connection) | 1: 1-phase 2-wire | X: Self power supply -30% +20% of the rated measuring input voltage, 45 to 65Hz | O1: pulse output S1: RS485 Modbus port M1: M-bus port |
| AV1: 120VLN AC - 5(100)A (Direct connection) | | | |

Option

PF: Certified according to MID Directive, Annex "B" + Annex "D" for legal metrology relevant to active electrical energy meters (see Annex MI-003 of MID). Can be used for fiscal (legal) metrology.

Measurement


B: Only the total positive energy meter is certified according to MID. Negative energy is not measured.



STANDARD

Not certified according to MID Directive. Cannot be used for fiscal (legal) metrology.

How to order **EM112-DIN AV0 1 X O1 X**

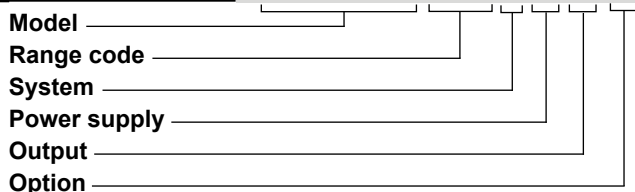

Type Selection

| Range code | System | Power supply | Output |
|--|--------------------------|---|--|
| AV0: 230VLN AC - 5(100)A (Direct connection) | 1: 1-phase 2-wire | X: Self power supply -30% +20% of the rated measuring input voltage, 45 to 65Hz | O1: pulse output S1: RS485 Modbus port M1: M-bus port |
| AV1: 120VLN AC - 5(100)A (Direct connection) | | | |

Option

X: none

Input specifications

| | | | |
|---|--|------------------------------|---|
| Rated Inputs | | Memory energy storage | |
| Current type | 1-phase loads, direct connection | Energy | 10 ¹⁰ cycles. Energy value is saved every time the less significant digit increases. |
| Current range | 5(100)A | Programming parameters | 10 ¹⁰ cycles. When a parameter is modified, only the relevant memory cell is overwritten |
| Nominal voltage | 230VLN AC (AV0 option), 120 VLN (AV1 option) | | |
| Accuracy (@25°C ±5°C, R.H. ≤60%, 45 to 65 Hz) | | LEDs | Flashing red light pulses according to EN50470-3, EN62052-11, 1000 imp./kWh (min. period: 90ms, max. frequency: 11 Hz) Fix orange light: wrong current direction (only with "B" measurement selection) |
| AV1 | I _{min} =0.25A; I _b : 5A, I _{max} : 100A; U _n : 120VLN -30% +30% | | |
| AV0 | I _{min} =0.25A; I _b : 5A, I _{max} : 100A; U _n : 230VLN -30% +20% | Current overloads | |
| Energies | | Continuous | 100A, @ 50Hz |
| Active energy | Class 1 according to EN62053-21 and MID Annex MI-003 Class B (Class B (kWh) according to EN50470-3) | For 10ms | 3000 A |
| Reactive energy | Class 2 according to EN62053-23 | Voltage Overloads | |
| Start-up current: | 40mA (AV0, AV1), positive or negative Self-consumption is not measured. | Continuous | 1.2 U _n |
| Start-up voltage | 84VLN (AV1), 161VLN (AV0) | For 500ms | 2 U _n |
| Resolution | Display/serial communication | Input impedance | |
| Current | 0.1/0.001 A | Voltage input 230VL-N | 1.2Mohm |
| Voltage | 0.1/0.1 V | Voltage input 120VL-N | 1.2Mohm |
| Power | 0.01 kW or kVar/ 0.1 W or var | Current inputs: 5(100) A | < 1.25VA |
| Frequency | 0.1 Hz/0.1Hz | | |
| PF | 0.01/ 0.001 | | |
| Energies (positive) | 0.01 kWh or kvarh / 0.1 kWh or kvarh | | |
| Energies (negative) | 0.01 kWh or kvarh / 0.1 kWh or kvarh | | |
| Energy additional errors | | | |
| Influence quantities | According to EN62053-21 | | |
| Temperature drift | ≤200ppm/°C | | |
| Sampling rate | 4096 samples/s @ 50Hz 4096 samples/s @ 60Hz | | |
| Display and touch key-pad | | | |
| Type | Backlit LCD, 3 rows by 8-digit each, h 5 mm | | |
| Read-out | Energy: 8 digit. Variables: 4 digit | | |
| Touch key | 2 (Enter and UP). | | |
| Max. and Min. indication | | | |
| Energies | Max. 99 999 999 Min. 0.01 | | |
| Variables | Max. 9999 Min. 0.01 | | |

Digital input specifications

| | | | |
|-----------------------------|---|----------|--|
| Digital inputs | Free of voltage contact | Overload | In case a voltage is erroneously applied to the digital input, the input is not damaged up to 30 VAC/DC. |
| Function | Tariff management (switch between t1-t2) | | |
| Number of inputs | 1 | | |
| Contact measurement voltage | 5 V | | |
| Contact impedance | 1kohm | | |
| Contact resistance | 1kohm, close contact 100kohm, open contact | | |

Output specifications

| | | | |
|-----------------------------|--|----------------------|---|
| RS485 serial port | RS485 by screw connection. | Other | Available functions: wild card, header, initialisation SND_NKE, and req_udr management. Management of primary address modification via M-bus and reset of partial energy via M-bus available. VIF, VIFE, DIF and DIFE: see protocol |
| Function | For communication of measured data, programming parameters | | |
| Protocol | ModBus RTU (slave function) | | |
| Baud rate | 9.6, 19.2, 38.4, 57.6, 115.2 kbaud, even or no parity, | | |
| Address | 1 to 247 (default: 01) | | |
| Driver input capability | 1/8 unit load. Maximum 247 transceivers on the same bus. | Static output | |
| Data refresh time | 1sec | Purpose | For pulse output proportional to the active energy (kWh) |
| Read command | 50 words available in 1 read command | Pulse rate | Selectable in multiple of 100 |
| Rx/Tx indication | Rx segment on display is shown when a valid Modbus command is sent to that specific meter Tx segment on display is shown when a valid Modbus reply is sent back to the master | Pulse ON duration | Max 500 or 2000 pulses/kWh according to pulse ON duration Selectable: 30ms or 100 ms according to EN62052-31 |
| M-bus port | M-bus by screw connection. | Output type | open collector PNP |
| Function | For communication of measured data | Load | V_{ON} 2.5 VAC/DC max. 100mA V_{OFF} 260 VAC max. |
| Protocol | M-bus according to EN13757-1 | | |
| Baud rate | 0.3, 2.4, 9.6 kbaud | | |
| Meters in the M-bus network | 250 | | |
| Primary address | Selectable | | |
| Secondary address | Univocally defined in each unit | | |
| Secondary address range | from 7000 0000 to 7999 9999 | | |

General specifications

| | | | |
|--|--|--------------------------------|---|
| Operating temperature | -25 to +65 °C, indoor, (R.H. from 0 to 90% non- condensing @ 40°C) | Standard compliance | EN62052-11 EN62053-21, EN50470-3 |
| Storage temperature | -30°C to +80°C (R.H. < 90% noncondensing @ 40°C) | Safety | |
| Overvoltage category | Cat. III | Metrology | |
| Insulation (for 1 minute) | 4000 VAC RMS between measuring inputs and digital/serial output (see table) 4000 VAC RMS | Approvals | CE, MID (PF option only) |
| Dielectric strength | 4000 VAC RMS for 1 minute | Connections | |
| EMC | According to EN62052-11 15kV air discharge; | Cable cross-section area | Measuring inputs: max. 25 mm ² , min. 5 mm ² with/ without metallic cable ferrule; Max. screw tightening torque: 2.8 Nm |
| Electrostatic discharges | | Other terminals | 1.5 mm ² , Min./Max. screws tightening torque: 0.5 Nm |
| Immunity to irradiated electromagnetic fields | Test with current: 10V/m from 80 to 2000MHz; Test without any current: 30V/m from 80 to 2000MHz; | Housing | |
| Burst | On current and voltage measuring inputs circuit: 4kV | Dimensions (WxHxD) | 35 x 63 x 90 mm |
| Immunity to conducted disturbances | 10V/m from 150KHz to 80MHz | Material | Noryl, self-extinguishing: UL 94 V-0 |
| Surge | On current and voltage measuring inputs circuit: 4kV; | Sealing covers | Included |
| Radio frequency | According to CISPR 22 | Mounting | DIN-rail |
| | | Protection degree | |
| | | Front | IP51 |
| | | Screw terminals (cable inputs) | IP20 |
| | | Weight | Approx. 160 g (packing included) |

Power supply specifications


| | | | |
|--------------------------|-----------------------------------|--------------------------|---------------|
| Self power supply | | Power consumption | ≤ 1.0W, ≤ 8VA |
| AV0 | 230VAC VL-N, -30% +20% 50/60Hz | | |
| AV1 | 120VAC VL-N, -30% +30% 50/60Hz | | |

Insulation (for 1 minute) between inputs and outputs


| | Measuring input | Digital or serial output | Digital input |
|--------------------------|-----------------|--------------------------|---------------|
| Measuring input | - | 4 kV | 4 kV |
| Digital or serial output | 4 kV | - | 0 kV |
| Digital input | 4 kV | 0 kV | - |

Accuracy (according to EN50470-3 and EN62053-23)

kWh, accuracy (RDG) depending on the current

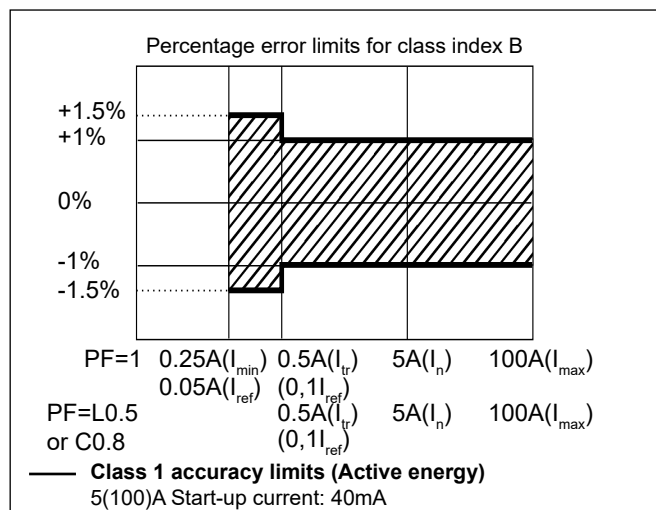

kvarh, accuracy (RDG) depending on the current

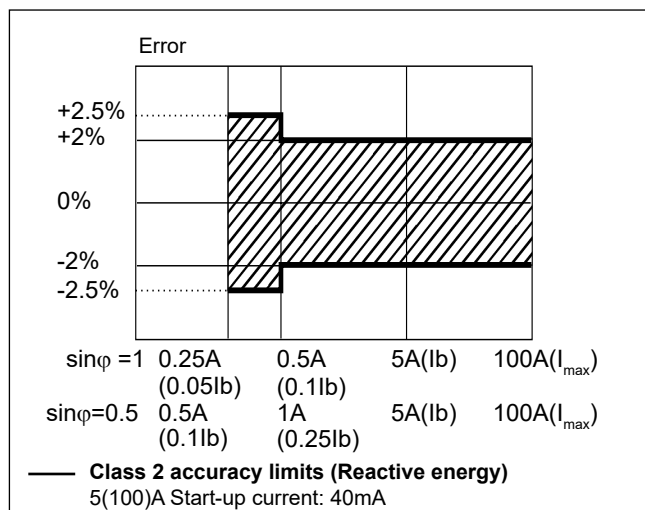

MID "Annex MI-003" compliance (PF option only)

| | |
|------------------------------|--|
| Accuracy | 0.9 U _n ≤ U ≤ 1.1 U _n ; 0.98 f _n ≤ f ≤ 1.02 f _n ; f _n : 50 Hz; cosφ: 0.5 inductive to 0.8 capacitive. Class B Considering listed I _b or I _n values |
| Operating temperature | -25 to +55°C (-13°F to 131°F) (R.H. from 0 to 90% non-condensing @ 40°C) |
| EMC compliance | E2 |
| Mechanical compliance | M2 |

Display pages

| No | 1 st row | 2 nd row | 3 rd row | "Full" mode | "Easy" mode | Note |
|----|---------------------|---------------------|---------------------|-------------|-------------|--|
| 0 | kWh+ (imported) | | kW | X | X | In PF version (MID) this is the only certified energy meter. In X version with Measurement menu set to "A", this is considering the total energy without considering the current direction. |
| 1 | kWh- (exported) | | kW | X | X | In PFB version and in X version with Measurement menu set to "B" |
| 2 | kWh+ (imported) | | V | X | X | |
| 3 | kWh+ (imported) | | A | X | X | |
| 4 | kWh+ (imported) | | PF | X | | |
| 5 | kWh+ (imported) | | Hz | X | | |
| 6 | kvarh+ (imported) | | kvar | X | | In X version with Measurement menu set to "A", this is considering the total positive reactive energy without considering the current direction. |
| 7 | kvarh- (exported) | | kvar | X | | In PFB version and in X version with Measurement menu set to "B" |
| 8 | kWh+ (imported) | kWdmd peak | kWdmd | X | | |
| 9 | kWh (t1) | "t1" | kW | X | | Only relevant to kWh+, with Tariff menu set to ON. |
| 10 | kWh (t2) | "t2" | kW | X | | Only relevant to kWh+, with Tariff menu set to ON. |

X= available

List of available menus

| Menu name and description | | Range | Default setting |
|---------------------------|---|--|-----------------|
| PASS | Password request | From 0000 to 9999 | 0000 |
| nPASS | New password | From 0000 to 9999 | 0000 |
| Measure | Measurement type (A=easy connection; B=bidirectional, imported and exported energy). Not available in PFA and PFB versions (MID) | A; b | A |
| P int | Integration time for Wdmd calculation | 1 to 30 min | 1 |
| Mode | Selection of complete or simplified set of variables on display | Full or Easy | Full |
| Tariff | Tariff enabling | Yes/No | No |
| Home | Home page selection (default page at power-on and after 120 s time-out from other pages). Not available in PFA and PFB versions (MID). | 0 to 9 | 0 |
| PULSE (O1 option) | Selection of pulse ON duration | 30 or 100 ms | 30 |
| | Selection of the pulse rate | 100 to 500 (if duration is 100ms) or to 2000 (if 30 ms) | 100 |
| Address (S1 option) | Modbus serial address | 1 to 247 | 01 |
| Kbaud (S1) | Modbus baud rate | 9.6; 19.2; 38.4; 57.6, 115.2 kbps | 9.6 |
| ParlTY (S1) | Modbus parity | No/even | No |
| PrI Add (M1 option) | M-bus primary address | 1 to 250 | 1 |
| Kbaud (M1) | M-bus baud rate | 0.3; 2.4; 9.6 kbps | 2.4 |
| RESET | Allow the reset of tariff meters and W dmd peak and of the kWh/kvarh partial meter available only via serial communication | Yes/No | No |
| End | Exit to measuring mode | | |








Note: after the confirmation of a new parameter value, the value is stored in the memory without the need to exit the programming mode.

Additional available information on the display (*)


| Type | Description | Note |
|-------------------|--|---|
| Info page 1 | YEA _r (2013) | Year of production |
| Info page 2 | SE _R I _A L (dddnnnA) | Serial number (ddd= day of the year; nnn=progressive number; A= production line, internal use only) |
| Info page 3 | rEV (A.01) | Firmware revision |
| Info page 4 | MEAS _{ur} E | Measurement type |
| Info page 5 | P int | Integration time for Wdmd calculation |
| Info page 6 | ModE | Set of variables on display |
| Info page 7 | tAr _I FF | Tariff enabling |
| Info page 8 | HoME | Selected home page |
| Info page 9 (O1) | PULSE | Pulse ON duration |
| | | Pulse rate |
| Info page 9 (S1) | AddrESS | Modbus serial address |
| Info page 10 (S1) | bAud | Modbus baud rate |
| Info page 11 (S1) | PAR _I tY | Modbus parity |
| | | Stop bit (in case of No parity only) |
| Info page 9 (M1) | Pr _I Add | M-bus primary address |
| Info page 10 (M1) | bAud | M-bus baud rate |

(*) can be reached by pressing simultaneously the 2 touch keys

Wiring diagrams

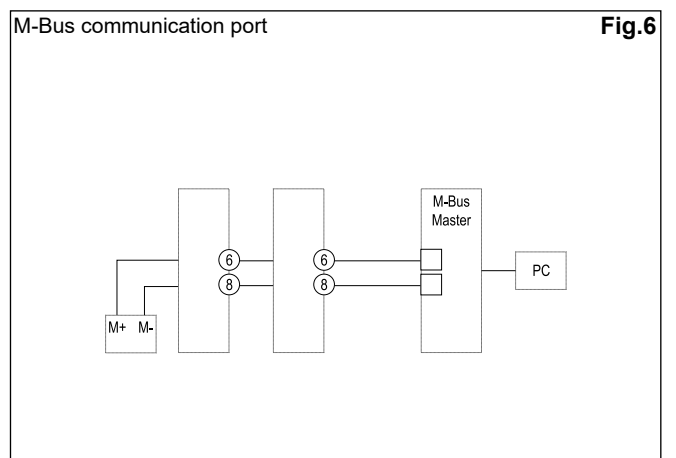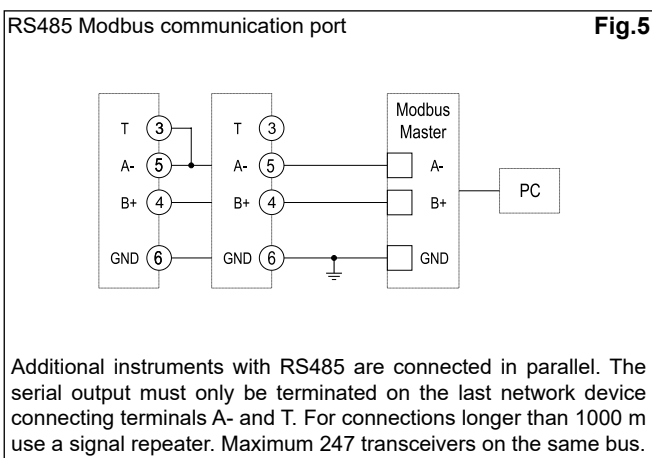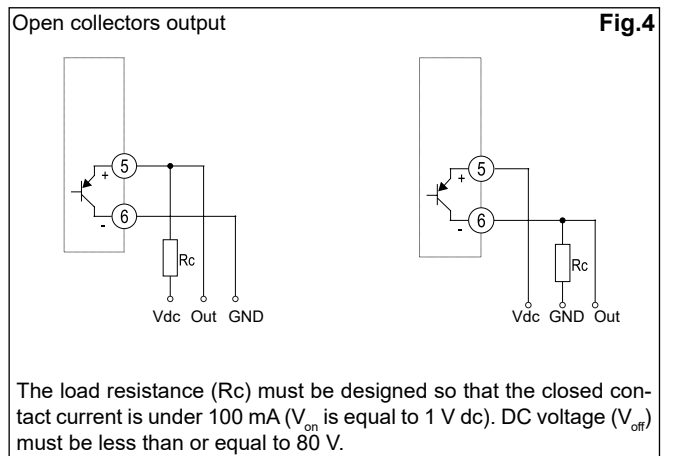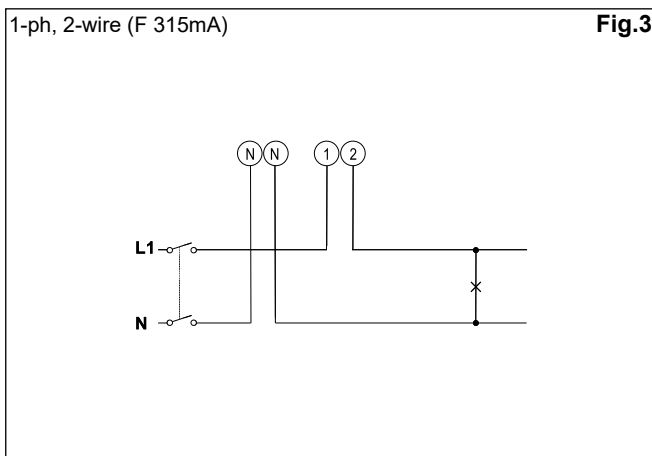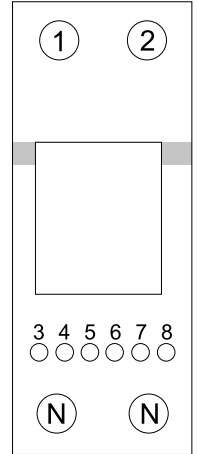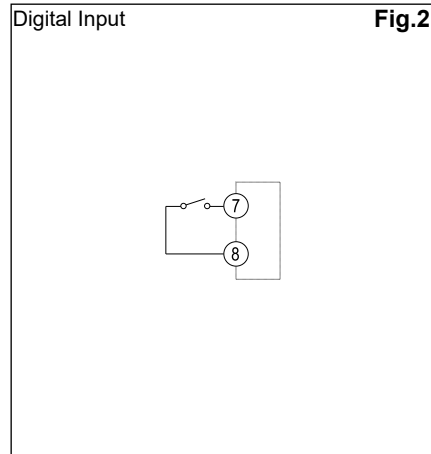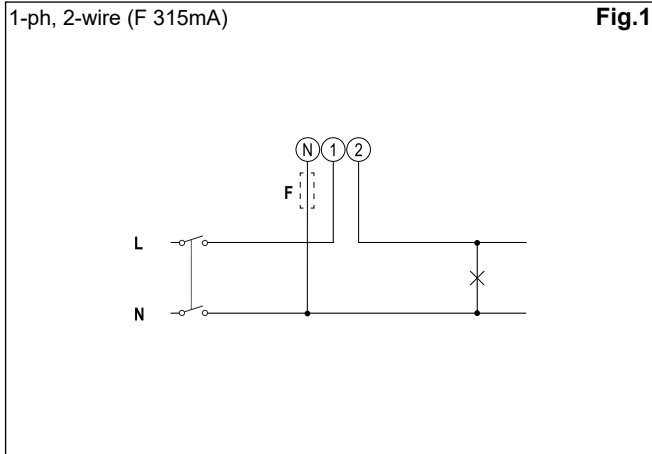

Front panel description

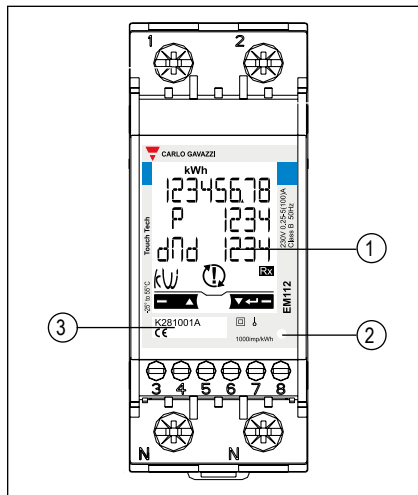

1. **Display**
Backlit LCD display with touch key-pad.
Right key ("E"): enter
Left key ("up"): UP
2. **LED**
LED proportional to kWh reading
3. **Serial number and MID data**
Area reserved to serial number and MID-relevant data in PF versions

Dimensions (mm)

