



COUNTIS *E41/E42*

Three-phase Energy meter Measure
via CT up to 12 000A - Pulse

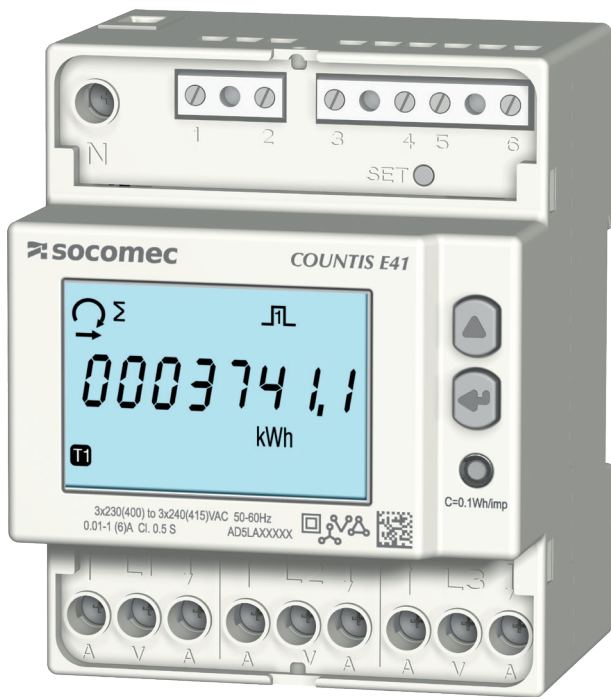

COUNTIS E41

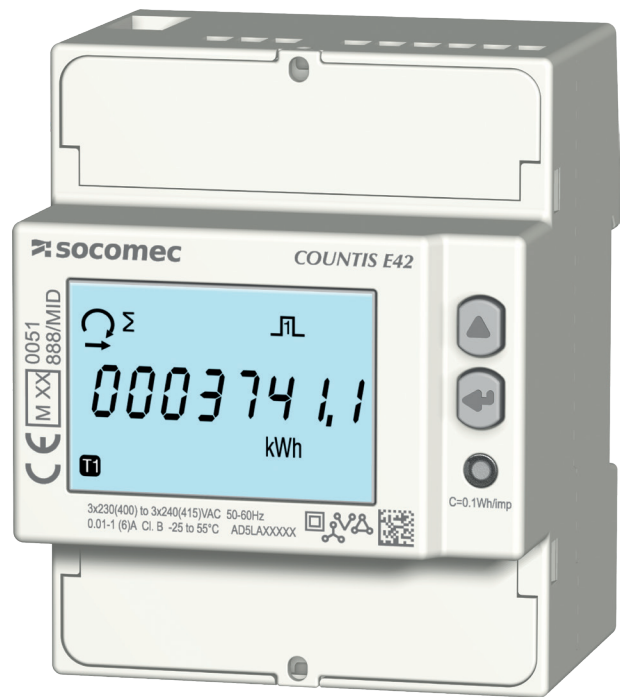


COUNTIS E42 - MID

| | |
|--|----|
| 1. DOCUMENTATION | 3 |
| 2. HAZARDS AND WARNINGS | 4 |
| 2.1. Risk of electrocution, burns or explosion | 4 |
| 2.2. Risk of damaging the unit | 4 |
| 2.3. Responsibility | 4 |
| 3. PRELIMINARY OPERATIONS | 5 |
| 4. INTRODUCTION | 6 |
| 4.1. Introducing the COUNTIS E41/E42 | 6 |
| 4.2. Functions | 6 |
| 4.3. Front panel | 6 |
| 4.4. LCD display | 7 |
| 4.5. Dimensions | 7 |
| 4.6. Electrical values measured | 8 |
| 4.6.1. Measurements | 8 |
| 4.6.2. Energy balance definition | 8 |
| 5. INSTALLATION | 9 |
| 5.1. Recommendations and safety | 9 |
| 5.2. DIN rail mounted | 9 |
| 6. CONNECTION | 10 |
| 6.1. Connecting the COUNTIS E41/E42 | 10 |
| 6.2. Connection to the electrical network and to the loads | 11 |
| 7. MID COMPLIANCE | 12 |
| 8. CONFIGURATION | 13 |
| 8.1. Onscreen configuration | 13 |
| 8.1.1. Detailed view of menu "SETUP 1" | 14 |
| 8.1.2. View all of the menu "SETUP 2" | 15 |
| 8.1.3. Detailed view of menu "SETUP 2" | 15 |
| 9. USE | 16 |
| 9.1. Detailed view of the menu for tariff 1, "Tar.1" | 17 |
| 9.2. Detailed view of the menu for tariff 2, "Tar.2" | 18 |
| 9.3. Detailed view of the total menu, "tot" | 19 |
| 9.4. Detailed view of the menu showing partial readings and the energy balance "Par.b" | 20 |
| 9.4.1. Starting up the partial energy meter | 21 |
| 9.4.2. Stopping the partial energy meter | 21 |
| 9.4.3. Resetting the partial energy meter to zero | 21 |
| 9.5. Detailed view of the menu for realtime readings, "rt" | 22 |
| 9.6. Detailed view of the menu "info" | 23 |
| 10. DIAGNOSTICS MESSAGES | 24 |
| 10.1. Missing phases | 24 |
| 10.2. Reversed phases | 24 |
| 10.3. Malfunction | 24 |
| 11. ASSISTANCE | 25 |
| 12. CHARACTERISTICS | 26 |
| 13. GLOSSARY OF ABBREVIATIONS | 29 |

1. DOCUMENTATION

All documentation on the COUNTIS E41/E42 is available on our website at the following address:

www.socomec.com/en/countis-e4x

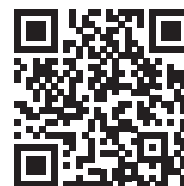

2. HAZARDS AND WARNINGS

The term "device" used in the paragraphs below refers to the COUNTIS E41/E42.

The assembly, use, servicing and maintenance of this equipment must only be carried out by trained, qualified professionals. SOCOMEC shall not be held responsible for failure to comply with the instructions in this manual.

2.1. Risk of electrocution, burns or explosion

- This device must only be installed and serviced by qualified personnel who have in-depth knowledge of installing, commissioning and operating the device and who have had appropriate training. He or she should have read and understood the various safety measures and warnings stated in the instructions.
- Before carrying out any work on the unit, switch off the voltage inputs.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Replace all devices, doors and covers before turning on power to this equipment.
- Always power the device with the correct rated voltage.
- Install the unit following the recommended installation instructions and in a suitable electrical cabinet.

Failure to take these precautions could cause death or serious injuries.

2.2. Risk of damaging the unit

To ensure that the unit operates correctly, make sure that:

- The unit is correctly installed.
- There is a maximum voltage at the voltage input terminals of 288 VAC phase-neutral
- The network frequency indicated on the device is observed: 50 or 60 Hz.
- There is a maximum current of 6 A at the current input terminals (I1, I2 and I3).

Failure to respect these precautions could cause damage to the unit.

2.3. Responsibility

- Assembly, connection and use must be carried out in accordance with the installation standards currently in force.
- The unit must be installed in accordance with the rules given in this manual.
- Failure to observe the rules for installing this unit may compromise the device's intrinsic protection.
- The unit must be positioned within an installation which complies with the standards currently in force.
- Any cable which needs to be replaced may only be replaced with a cable having the correct rating.

3. PRELIMINARY OPERATIONS

To ensure the safety of staff and the equipment, it is vital to read and absorb the contents of these instructions thoroughly before commissioning.

Check the following points as soon as you receive the package containing the unit:

- The packaging is in good condition
- The unit has not been damaged during transportation
- The device reference number conforms to your order
- The package includes:
 - 1 device
 - 1 sealing kit (for COUNTIS E42)
 - 1 Quick Start Guide

4. INTRODUCTION

4.1. Introducing the COUNTIS E41/E42


The COUNTIS E41/E42 are modular active and reactive electrical energy meters that displays consumed and produced energy. They are designed for three-phase networks and can be connected using a CT 1/5 A on installations up to 12000 A.

4.2. Functions


- Measures and displays bidirectional total and partial energy
- Dual tariff management: T1 / T2
- Pulse output
- Electrical parameter measurements: I, U, V, f
- Bidirectional Power, power factor
- MID

| DESCRIPTION | REFERENCE |
|-------------|------------------|
| COUNTIS E41 | 4850 3063 |
| COUNTIS E42 | 4850 3064 |

4.3. Front panel

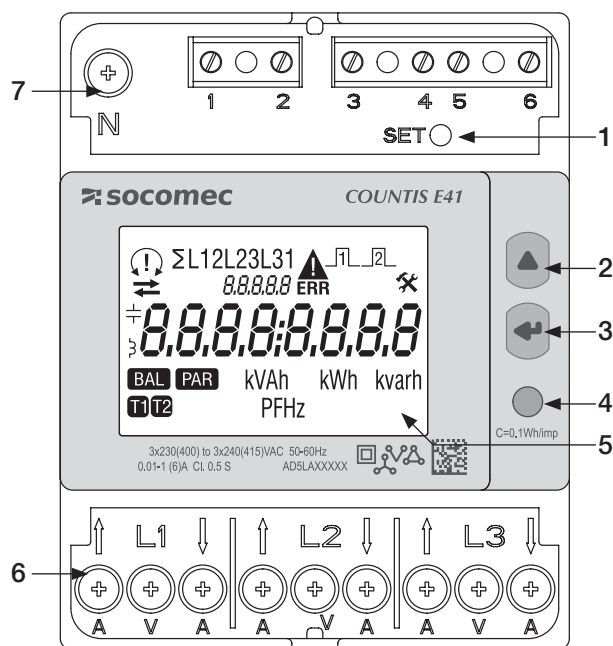


1. SET button
2. UP button
3. ENTER key
4. Metrological LED
5. LCD display
6. Current and voltage terminals
7. Neutral connection

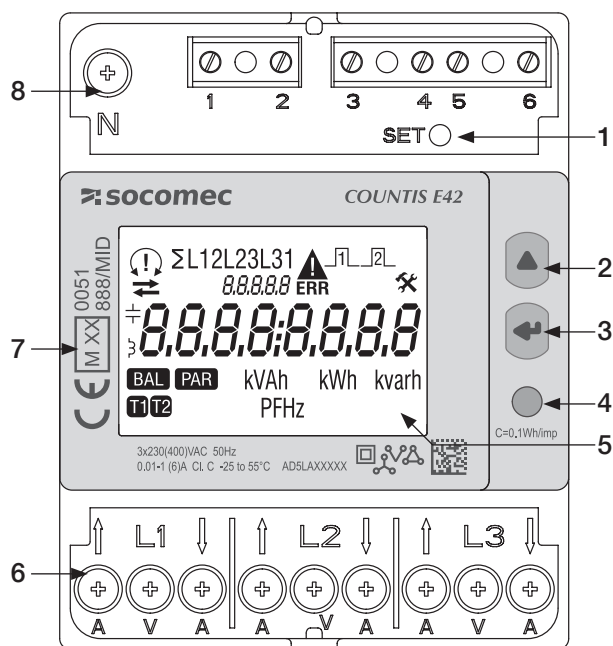

1. SET button
2. UP button
3. ENTER key
4. Metrological LED
5. LCD display
6. Current and voltage terminals
7. Information relating to MID certification
8. Neutral connection


4.4. LCD display

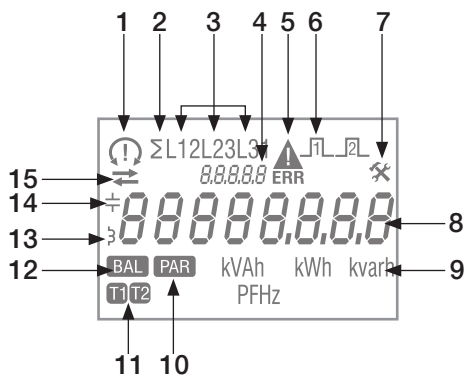

1. Phase sequences:
 - ⌚ 132
 - ⌚ 123
 - ⚡ one or multiple phases are not detected
2. System value
3. Value by phase
4. Different meanings according to the shown item:
 - CT XXXX: CT ratio value
 - SEC: secondary value shown in the main area
 - SEtUP: Setup page
 - InFO: Info page
5. Device malfunction. Replace the device
6. Active pulse output
7. Setup menu
8. Main zone
9. Measurement Unit
10. Partials meters. Flashing = partial meter has stopped
11. Tariff display
12. Energy balance
13. Inductive value
14. Capacitive value
15. Imported (→) or exported energy or power (←)

4.5. Dimensions

Dimensions: in/mm

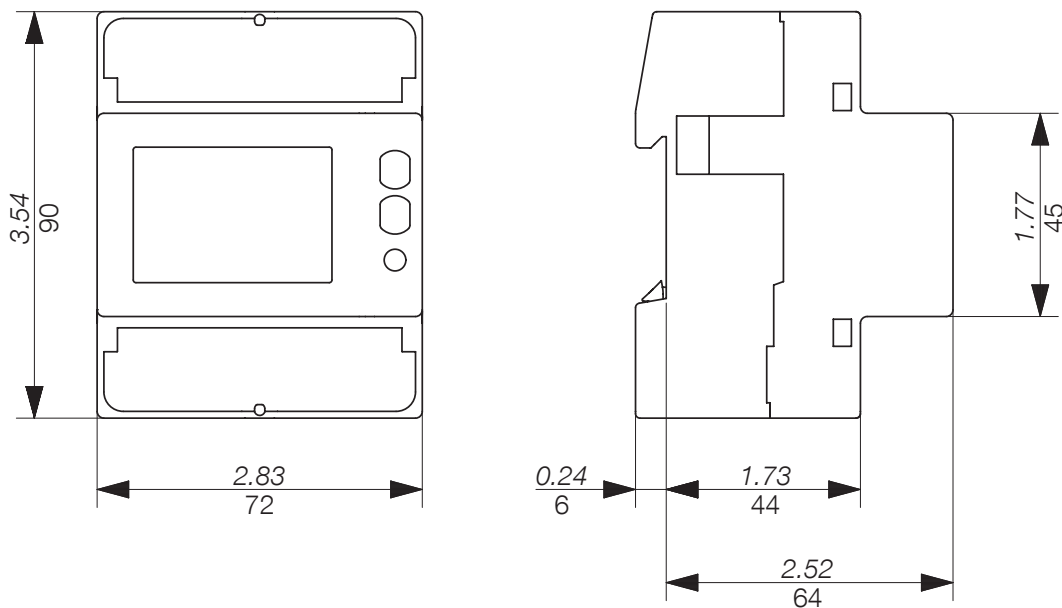

4.6. Electrical values measured

4.6.1. Measurements

Settings vary by model.

| REALTIME VALUES | SYMBOL | MEASUREMENT UNIT | LCD DISPLAY |
|---|-------------------------------------|------------------------|-------------|
| Phase to neutral voltage | $\sum V$ | V | ● |
| Phase to phase voltage | $\sum U$ | | ● |
| Current | $\sum I$ | A | ● |
| Power factor | $\sum PF$ | | ● |
| Apparent power | $\sum S, S1, S2, S3$ | kVA | ● |
| Active power | $\sum P, P1, P2, P3$ | kW | ● |
| Reactive power | $\sum Q, Q1, Q2, Q3$ | kVAr | ● |
| Frequency | f | Hz | ● |
| Phase sequence | CW / CCW | | ● |
| Power direction | \rightleftharpoons | | ● |
| LOGGED DATA | | | |
| Total active and reactive energy | E_a, E_r (\sum & par phase) | kWh, kvarh | ● |
| Total apparent energy | E_{ap} (\sum) | kVAh | ● |
| Total inductive and capacitive reactive energy | E_r (\sum) | kvarh | ● |
| Total active, reactive energy for each tariff (T1/T2) | E_a, E_r (\sum) | kWh, kvarh | ● |
| Total reactive, inductive and capacitive energy for each tariff (T1/T2) | E_r (\sum) | kvarh | ● |
| Active, partial energy for each tariff (T1/T2) | E_a (\sum) | kWh | ● |
| Active, reactive and apparent partial energy | E_a, E_r, E_{ap} (\sum) | kWh, kvarh, kVAh | ● |
| Energy balance | \sum | kWh, kvarh | ● |
| MISCELLANEOUS | | | |
| Present tariff | T | 1/2 | ● |
| Partial counters | BY | START/STOP | ● |
| Pulse output status | $\square \square \square$ | Active / Not active | ● |

i **Note:** \sum is the sum of the meter readings for each phase, divided by 3.

i **Note:** if you have a 3-wire connection the following voltage readings are not available; phase-neutral, neutral current, phase power, power factor for each phase and power for each phase.

4.6.2. Energy balance definition

| | FORMULA |
|-------|---|
| kWh | (+kWh T1) – (-kWh T1) + (+kWh T2) – (-kWh T2) |
| kvarh | (+kvarh T1) – (-kvarh T1) + (+kvarh T2) – (-kvarh T2) |

5. INSTALLATION

The paragraphs below describe how to install the device.

5.1. Recommendations and safety

Refer to the safety instructions (section "2. Hazards and warnings", page 4)


- Keep away from electromagnetic interference generator systems,
- Avoid vibrations with accelerations greater than 1 g for frequencies lower than 60 Hz.

5.2. DIN rail mounted

The COUNTIS E41/E42 can be mounted on a 35-mm DIN rail (EN 60715TM35). It must be used inside electrical cabinets.

6. CONNECTION

6.1. Connecting the COUNTIS E41/E42

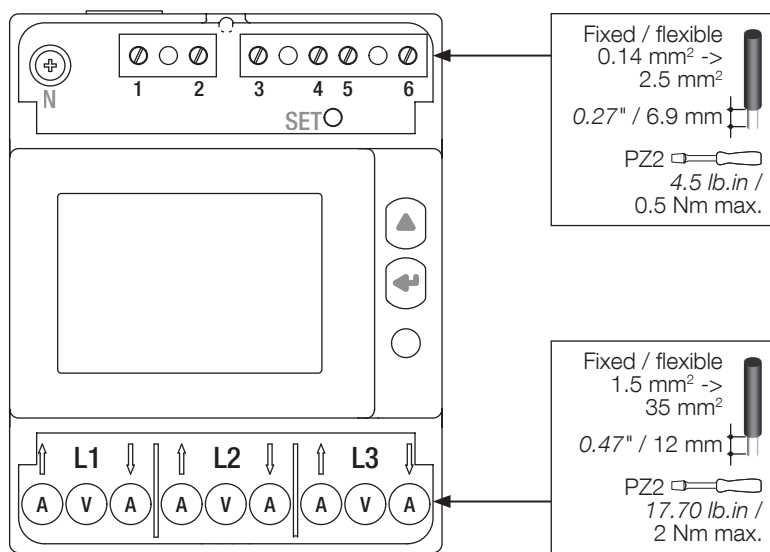


6.2. Connection to the electrical network and to the loads

The COUNTIS E41/E42 are intended for three-phase networks with or without neutral.



The earthing of CT secondary is **forbidden** in IT earthing system ; it is optional in TT/TN earthing system.

3 phases, 4 wires, 3 CT

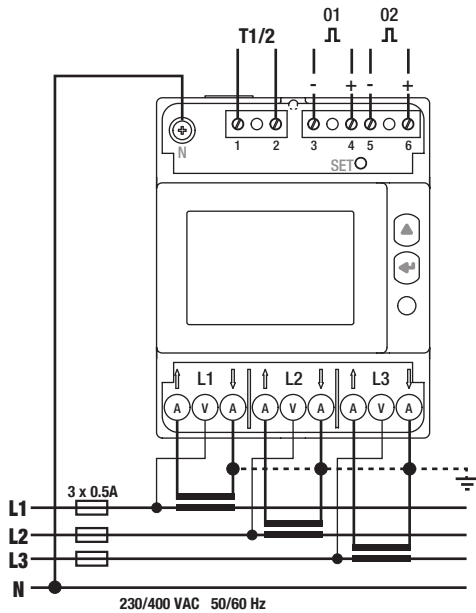

Double tariff

1-2: Switch tariffs:
0 VAC/DC -> Tariff 1
80-276 VAC/DC -> Tariff 2

Pulse output 1

3-4: Ea+

Pulse output 2


5-6: Er+

Optocoupler pulse output 250VAC/DC (100mA)


Mains

L1 A: Current input/output
L1 V: Voltage input
L2 A: Current input/output
L2 V: Voltage input
L3 A: Current input/output
L3 V: Voltage input
N: Neutral connection

3 phases, 3 wires, 3 CT

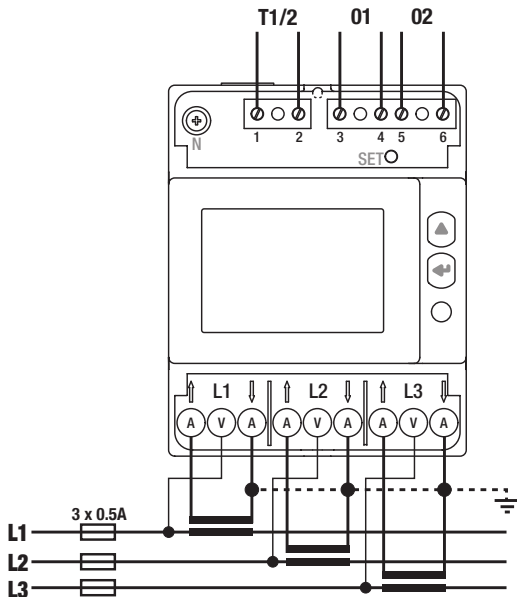

3 phases, 3 wires, 2 CT

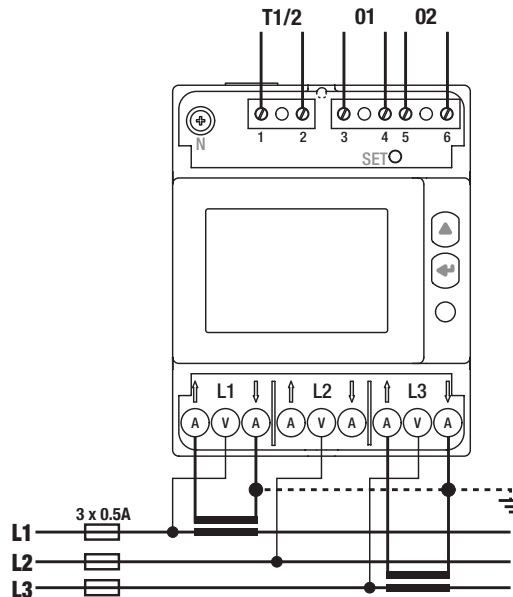

7. MID COMPLIANCE

The following points must be taken into consideration to ensure that the device is used in compliance with directive MID 2014/32/EU:

- **Type of network**

The COUNTIS E42 meter complies with the MID directive for connection to networks: 3P+N and 3P (see "6.2. Connection to the electrical network and to the loads", page 11)

- **Fitting terminal covers**



After connecting the device, ensure that the terminal covers are fitted properly and secured by the plastic seals provided with the device.

- **Locking the program button**

Make sure the SET program button is locked after fitting the terminal cover.

- **MID Declaration of Conformity**

The MID Declaration of Conformity is available on the website: www.socomec.com/en/countis-e4x

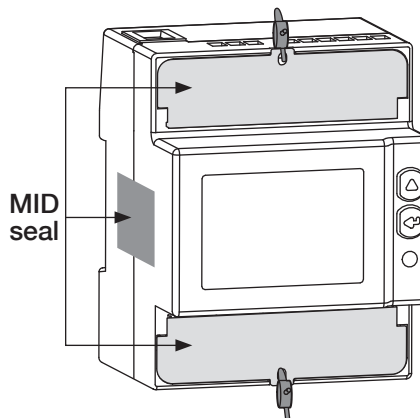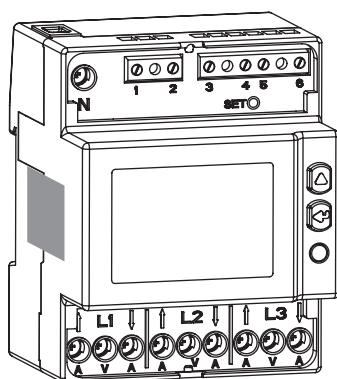











8. CONFIGURATION

The device can be configured directly from the COUNTIS E41/E42 screen in programming mode.

8.1. Onscreen configuration

From the screen, go to programming mode to reset partial energy to zero. How to browse through the programming mode is described in the following stages:


| FUNCTION | WHERE | BUTTONS | PRESS |
|---|--|---|----------|
| Switch menus | Every page with the exception of SETUP 1/2 |  | Realtime |
| Switch pages within a menu | Every page within a menu |  | Realtime |
| Go to menu SETUP 2 | Menu page SETUP |  | > 3 sec |
| Go to menu SETUP 1 | Every page with the exception of SETUP 1 | SET | > 3 sec |
| Exit menu SETUP 1/2 | Menu SETUP 1/2 |  | > 3 sec |
| Start/stop the displayed partial meter | Partial meter menu |  +  | Realtime |
| Reset the displayed partial meter to zero | Partial meter menu |  +  | > 3 sec |
| Display test | Every page with the exception of SETUP 1/2 |  +  | > 10 sec |

8.1.1. Detailed view of menu "SETUP 1"

In menu "SETUP 1" you can select the connection type and configure the primary and secondary of the current transformers.

Press SET for 3 seconds using a screwdriver to put the device into programming mode.


The default connection (Wir) is: 3.4.3 = 3 phases, 4 wires, 3 CT. Other possible connections: 3.3.3 = 3 phases, 3 wires, 3 CT or 3.3.2 = 3 phases, 3 wires, 2 CT

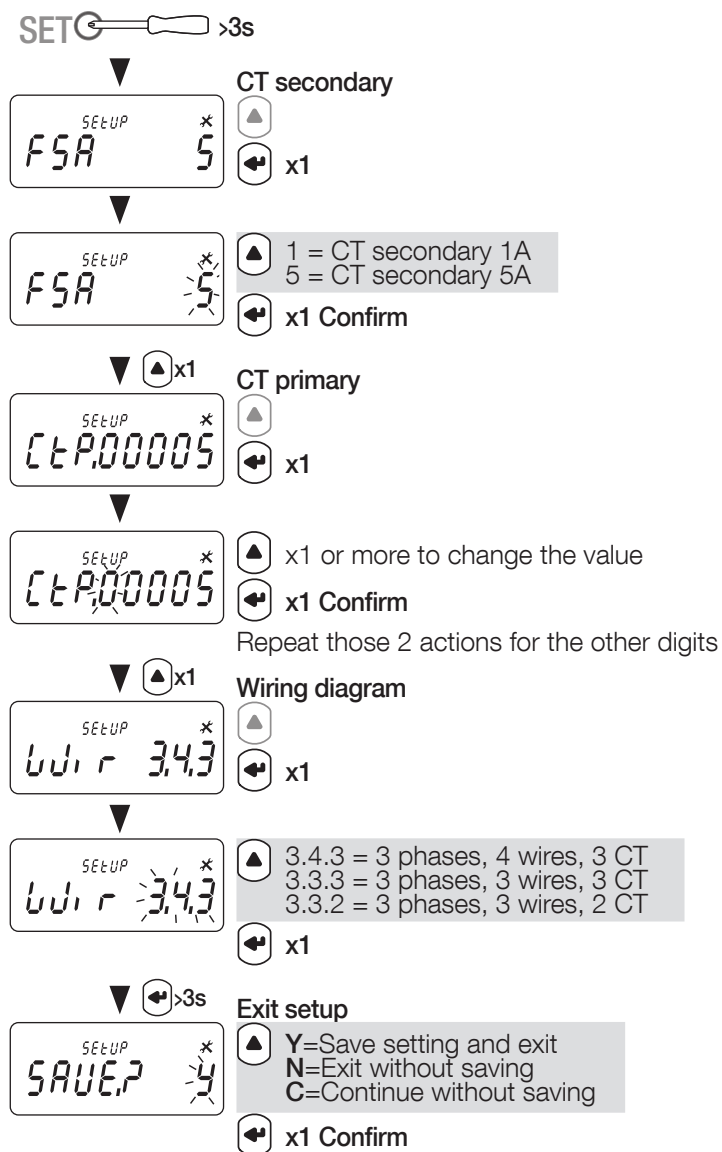

8.1.2. View all of the menu "SETUP 2"

In the SETUP 2 menu, press "⏪" for 3 seconds to put the device into programming mode.


You can go to the different screens by pressing "⏩":

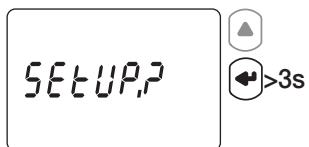

Reset partial energy to zero:
Ea+ partial (kWh) Tariff T1, T2
Ea+ partial (kWh)
Ea- partial (kWh) Tariff T1, T2
Ea- partial (kWh)
Eap partial (kVAh)
Er+ partial (kVarh)
Er- partial (kVarh)

Return to the first menu screen, "SETUP 2"

8.1.3. Detailed view of menu "SETUP 2"

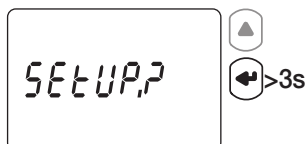



Reset energies



Ea+ partial Tariff T1, T2; Ea+ partial;
Ea- partial Tariff T1, T2; Ea- partial;
Eap partial; Er+ partial; Er- partial

Return to the first menu screen, "SETUP 2"

9. USE

Switch menus by pressing "". Press "" to see the electrical readings or information within a menu.

The menus and related measurements are described in the table below:

| Tariff 1 (Tar.1) | Tariff 2 (Tar.2) | Total (tot) | Partial readings and energy balance (Par.b) | Realtime values (rt) | Information (inFo) |
|---|---|--|---|---------------------------------------|---------------------------------------|
| Tariff 1 - Imported and exported active energy | Tariff 2 - Imported and exported active energy | Total imported and exported active energy | Partial imported active energy by tariff | Active, apparent and reactive power | Metrological firmware version |
| Tariff 1 - Imported and exported inductive reactive energy | Tariff 2 - Imported and exported inductive reactive energy | Total apparent energy | Partial imported active energy | Phase/phase and phase/neutral voltage | Non-metrological firmware version |
| Tariff 1 - Imported and exported capacitive reactive energy | Tariff 2 - Imported and exported capacitive reactive energy | Total imported and exported inductive reactive energy | Partial exported active energy by tariff | Three-phase current | Checksum of metrological firmware |
| Tariff 1 - Imported and exported reactive energy | Tariff 2 - Imported and exported reactive energy | Total imported and exported capacitive reactive energy | Partial exported active energy | Power factor | Checksum of non-metrological firmware |
| Go back to first screen, menu "Tar.1" | Go back to first screen, menu "Tar.2" | Total imported and exported reactive energy | Partial apparent energy | Frequency | Connection type |
| | | Go back to first screen, menu "tot" | Partial imported and exported reactive energy | Go back to first screen, menu "rt" | Go back to first screen, menu "info" |
| | | | Active energy balance | | |
| | | | Reactive energy balance | | |
| | | | Go back to first screen, menu "Par.b" | | |

9.1. Detailed view of the menu for tariff 1, "Tar.1"

| | |
|--|--|
| Imported active energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kWh | |

| | |
|--|--|
| Exported active energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kWh | |

| | |
|--|--|
| Imported inductive reactive energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh | |

| | |
|--|--|
| Exported inductive reactive energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh | |

| | |
|--|--|
| Imported capacitive reactive energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh | |

| | |
|--|--|
| Exported capacitive reactive energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh | |

| | |
|--|--|
| Imported reactive energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh | |

| | |
|--|--|
| Exported reactive energy, tariff 1 | |
| $\int_{\Sigma}^{t_{RR,1}}$ 000006.22 kvarh | |

Go back to first screen, menu "Tar.1"

9.2. Detailed view of the menu for tariff 2, "Tar.2"

| | |
|--|--|
| Imported active energy, tariff 2 | |
| $\int_{\Sigma}^{\rightarrow} t_{RR,2}$ 000006.22 kWh | |

| | |
|---|--|
| Exported active energy, tariff 2 | |
| $\int_{\Sigma}^{\leftarrow} t_{RR,2}$ 000006.22 kWh | |

| | |
|--|--|
| Imported inductive reactive energy, tariff 2 | |
| $\int_{\Sigma}^{\rightarrow} t_{RR,2}$ 000006.22 kvarh | |

| | |
|---|--|
| Exported inductive reactive energy, tariff 2 | |
| $\int_{\Sigma}^{\leftarrow} t_{RR,2}$ 000006.22 kvarh | |

| | |
|--|--|
| Imported capacitive reactive energy, tariff 2 | |
| $\int_{\Sigma}^{\rightarrow} t_{RR,2}$ 000006.22 kvarh | |

| | |
|---|--|
| Exported capacitive reactive energy, tariff 2 | |
| $\int_{\Sigma}^{\leftarrow} t_{RR,2}$ 000006.22 kvarh | |

| | |
|--|--|
| Imported reactive energy, tariff 2 | |
| $\int_{\Sigma}^{\rightarrow} t_{RR,2}$ 000006.22 kvarh | |

| | |
|---|--|
| Exported reactive energy, tariff 2 | |
| $\int_{\Sigma}^{\leftarrow} t_{RR,2}$ 000006.22 kvarh | |

Go back to first screen, menu "Tar.2"

9.3. Detailed view of the total menu, "tot"

| | |
|---|----------------------|
| Total imported active energy | |
| Ω_{L1}^{tot} 000008.32 kWh | L1, L2, L3, Σ |

| | |
|---|----------------------|
| Total exported active energy | |
| Ω_{L1}^{tot} 000008.32 kWh | L1, L2, L3, Σ |

| | |
|--|----------|
| Total apparent energy | |
| Ω_{Σ}^{tot} 000008.32 kVAh | Σ |

| | |
|---|----------|
| Total imported inductive reactive energy | |
| Ω_{Σ}^{tot} 000008.32 kvarh | Σ |

| | |
|---|----------|
| Total exported inductive reactive energy | |
| Ω_{Σ}^{tot} 000008.32 kvarh | Σ |

| | |
|--|----------|
| Total imported capacitive reactive energy | |
| Ω_{Σ}^{tot} +000008.32 kvarh | Σ |

| | |
|--|----------|
| Total exported capacitive reactive energy | |
| Ω_{Σ}^{tot} +000008.32 kvarh | Σ |

| | |
|---|----------------------|
| Total imported reactive energy | |
| Ω_{L1}^{tot} 000008.32 kvarh | L1, L2, L3, Σ |

| | |
|---|----------------------|
| Total exported reactive energy | |
| Ω_{L1}^{tot} 000008.32 kvarh | L1, L2, L3, Σ |

Go back to first screen, menu "tot"


9.4. Detailed view of the menu showing partial readings and the energy balance "Par.b"

| | |
|--|--|
| Imported partial active energy for tariff T1 | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh | |
| Imported partial active energy for tariff T2 | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh | |
| Partial imported active energy | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh | |
| Exported partial active energy for tariff T1 | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh | |
| Exported partial active energy for tariff T2 | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh | |
| Partial exported active energy | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kWh | |
| Partial apparent energy | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kVAh | |


| | |
|---|--|
| Partial imported reactive energy | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kvarh | |
| Partial exported reactive energy | |
| $\text{Q}_{\Sigma}^{\text{PAR},b}$ 000008.54 Σ kvarh | |
| Active energy balance | |
| $\text{Q}_{\Sigma}^{\text{BAL},b}$ 000008.54 kWh | |
| Reactive energy balance | |
| $\text{Q}_{L1}^{\text{PAR},b}$ 000008.32 kvarh | |

Go back to first screen, menu "Par.b"


9.4.1. Starting up the partial energy meter

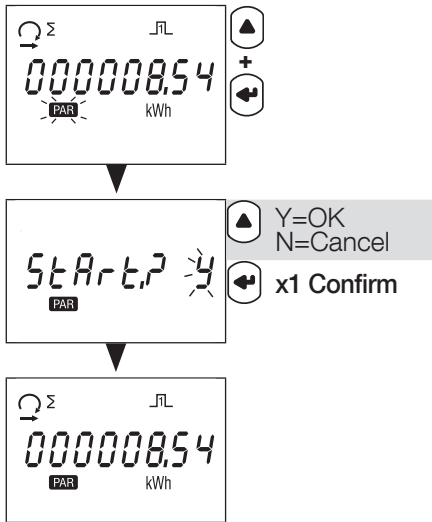

9.4.2. Stopping the partial energy meter

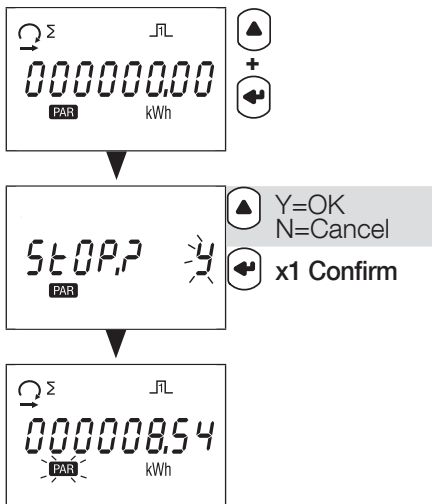

9.4.3. Resetting the partial energy meter to zero

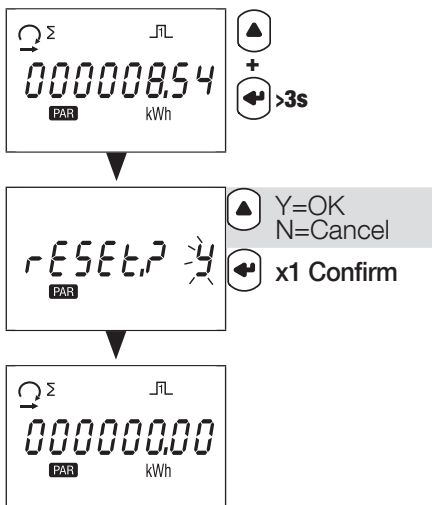

9.5. Detailed view of the menu for realtime readings, "rt"

| Realtime active power | |
|---------------------------------|----------------------|
| \odot_{L1}^{rt} 1150 kW | L1, L2, L3, Σ |

| Realtime apparent power | |
|----------------------------------|----------------------|
| \odot_{L1}^{rt} 1150 kVA | L1, L2, L3, Σ |

| Realtime reactive power | |
|-----------------------------------|----------------------|
| \odot_{L1}^{rt} 1150 kvar | L1, L2, L3, Σ |

| Realtime phase/phase voltage | |
|--|----------|
| $\odot_{\Sigma L12\ 23\ 31}^{rt}$ 1513 V | Σ |

| Realtime phase/neutral voltage | |
|--|----------|
| $\odot_{\Sigma L1\ 2\ 3}^{rt}$ 075,7 V | Σ |


| Realtime three-phase current | |
|-------------------------------------|----------|
| \odot_{Σ}^{rt} 69,67 A | Σ |


| Realtime power factor | |
|--------------------------------------|----------|
| \odot_{Σ}^{rt} 0,800 PF | Σ |


| Frequency | |
|--------------------------------------|--|
| \odot_{Σ}^{rt} 50,00 Hz | |


Go back to first screen, menu "rt"


9.6. Detailed view of the menu "info"

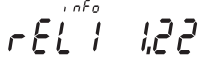
| Metrological firmware version | |
|--|--|
|  | |

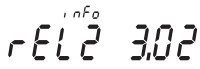
| Non-metrological firmware version | |
|--|--|
|  | |

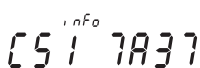
| Checksum of metrological firmware | |
|--|--|
|  | |
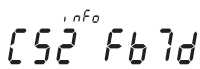
| Checksum of non-metrological firmware | |
|--|--|
|  | |
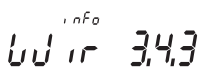
| Connection type | |
|--|---|
|  | 3 phases, 4 wires, 3 CT 3 phases, 3 wires, 3 CT 3 phases, 3 wires, 2 CT |
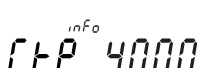
| CT primary value (CtP) | |
|--|-------------|
|  | 1...12000 A |

| CT secondary value (FSA) | |
|--|----------|
|  | 1 or 5 A |

 Go back to first screen, menu "info"

10. DIAGNOSTICS MESSAGES

The following messages appear if there are connection or malfunction errors.



10.1. Missing phases




- If one or several phases are not detected, the exclamation point  flashes on the screen. Example: phase not detected

10.2. Reversed phases



- If a 123 phase sequence is detected, the  symbol appears.
- If a 132 phase sequence is detected, the  symbol appears.

10.3. Malfunction

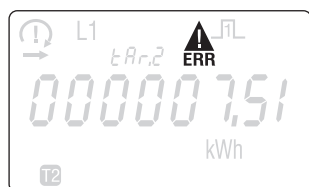

- If you see this message, the meter has malfunctioned and must be replaced.

11. ASSISTANCE

| CAUSES | SOLUTIONS |
|---------------------------|--|
| Device not working | Check the neutral and phase 1 cable connections. |
| Phases not shown onscreen | Check the connections |
| Phases reversed onscreen | Check the network configuration |
| Error message | Check the meter is working OK |

12. CHARACTERISTICS

| GENERAL FEATURES | |
|-------------------------------------|--|
| Compliant with | European EMC Directive No. 2014/30/EU dated 26/02/2014 LV Directive No. 2014/35/EU dated 26/02/2014 Measuring Instrument Directive MID No. 2014/32/EU dated 26/02/2014 EN50470-1/-3 IEC 62053-21/-23 |
| Frequency | MID model: 50 Hz \pm 1 Hz Non MID model: 50/60 Hz \pm 1 Hz |
| Power supply | Self-supplied |
| Rated dissipated power (Wmax.) | 7.5VA (0.5W) |
| OPERATING FEATURES | |
| Three-phase connectivity | 3/4 wires MID model: 3x 230/400 V Non MID model: 3x 230/400 V to 3x 240/415 V |
| Stores energy readings and settings | In FRAM memory |
| Identifies display of tariffs | T1 and T2 |
| CURRENT MEASUREMENTS | |
| Type | via current transformers |
| CT burden (for each phase) | 0,04 VA |
| Startup current (Ist) | 2mA (Class 1) 1mA (Class C) |
| Minimum current (Imin) | 0.10 A |
| Transition current (Itr) | 50mA |
| Reference current (Iref) | 1 A |
| Maximum current (Imax) | 6 A |
| CURRENT TRANSFORMER AND FSA | |
| Minimum CT primary | 1 |
| Maximum CT primary | 12000 |
| CT Secondary | 1 or 5 A |
| OVERLOAD CAPACITY | |
| Voltage Un continuous | 288 VAC |
| Voltage Un momentary (1 s) | 300 VAC |
| Current Imax continuous | 6 A |
| Current Imax momentary | 20 Imax for 0.5 s |
| VOLTAGE MEASUREMENTS | |
| Consumption | 3.5VA max. per phase |
| Permanent max. voltage | 290V phase-neutral / 500V phase-phase |
| FREQUENCY MEASUREMENT | |
| Frequency measurement | 45-65 Hz |
| ENERGY MEASUREMENT | |
| Active | Yes |
| Reactive | Yes |
| Total and partial reading | Yes |
| MID metering | Bidirectional with three-phase |
| Resolution | 10 Wh, 10 varh |

| ENERGY ACCURACY | |
|--|--|
| Active energy Ea+ | Class C (EN 50470-3) Class 1 (EN 62053-21) |
| Reactive energy Er+ | Class 2 (EN 62053-23) |
| TARIFF FOR Ea+ | |
| Tariff management | Yes (via input) |
| Number of tariffs managed | 2 |
| Tariff input | Yes |
| Input type | Opto-isolated |
| Voltage | 0V --> Tariff 1 80-276 VAC-DC --> Tariff 2 |
| METROLOGICAL LED (Ea+, Ea-) | |
| Pulse value | 1000 pulses / kWh |
| Colour | Red |
| PULSE OUTPUT | |
| Type | Opto-isolated - 250 VAC/DC 100mA according to EN 62053-31 |
| Pulse weight according to the set CT ratio | 1 Wh → CT = 1 ... 4 5 Wh → CT = 5 ... 24 25 Wh → CT = 25 ... 124 125 Wh → CT = 125 ... 624 1000 Wh → CT = 625 ... 3124 10000 Wh → CT = 3125 ... 12000 |
| S0-1 | Ea+ |
| S0-2 | Er+ |
| DISPLAY | |
| Type | 8-digit LCD with backlight |
| Refresh time | 1 s |
| Backlight activation time | 10 s |
| Active energy: 1 display, 8-digit | 00000.000 kWh ... 999999.99 MWh |
| Reactive energy: 1 display, 8-digit | 00000.000 kvarh ... 999999.99 Mvarh |
| Apparent energy: 1 display, 8-digit | 00000.000 kVAh ... 999999.99 MVAh |
| Instantaneous active power: 1 display, 4-digit | 0.000 kW ... 99.99 MW |
| Instantaneous reactive power: 1 display, 4-digit | 0.000 kvar ... 99.99 Mvar |
| Instantaneous apparent power: 1 display, 4-digit | 0.000 kVA ... 99.99 MVA |
| Instantaneous voltage: 1 display, 4-digit | 000.0 ... 999.9 V |
| Instantaneous current: 1 display, 4-digit | 0.000 ... 99.99 kA |
| Power factor: 1 display, 4-digit | 0.000 ... 1.000 |
| Frequency: 1 display, 4-digit | 45.00-65.00 Hz |
| SAVING | |
| Energy registers | In FRAM memory |

| ENVIRONMENTAL CONDITIONS | |
|--|---|
| Mechanical environment | M1 |
| Electromagnetic environment | E2 |
| Operating temperature range | -25° C to +55° C |
| Storage temperature | -25° C to +75° C |
| Humidity | ≤ 80% |
| Installation | Internal (box/cabinet) |
| Vibrations | ±0.075 mm |
| HOUSING | |
| Dimensions W x H x D (mm) | Modular - width of 4 modules (DIN 43880) 72 x 90 x 64 |
| Mounting | On DIN rail (EN 60715) |
| Connection capacity, tightening torque | See chapter "6. Connection", page 10 |
| Protection index | Front: IP51 - casing: IP20 |
| Insulation class | Class II (EN 50470-1) |
| Weight | 440 g |

13. GLOSSARY OF ABBREVIATIONS

| | |
|---------|--|
| info | Menu information |
| rEL1 | Metrological firmware version |
| rEL2 | Non-metrological firmware version |
| CS1 | Checksum of metrological firmware |
| CS2 | Checksum of non-metrological firmware |
| tAr.1 | Menu for Tariff 1 |
| tAr.2 | Menu for Tariff 2 |
| tot | Total menu |
| PAr.b | Partial readings and energy balance menu |
| rt | Realtime values menu |
| SEtuP.2 | Setup 2 menu |
| rES | Reset partial energy |
| ConF? | Confirm selection |
| Y | Save and exit |
| N | Exit without saving |
| C | Continue without saving |

CORPORATE HQ CONTACT:
SOCOMECSAS
1-4 RUE DE WESTHOUSE
67235 BENFELD, FRANCE

www.socomec.com

